



# AireControl® Universal Hand Held Remote System

## INSTALLATION & OPERATING INSTRUCTIONS

For model RCS212  
U.S. Patents: D533,514; D551,008  
8,253,272

### WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

NOTE: The RCS212 Universal Hand Held Remote Control System is equipped with a learning frequency function which has 256 code combinations to prevent potential interference from other remote units. The frequency on your Receiver and Transmitter units have been preset at the factory. We recommend changing the frequency while installing your ceiling fan instead of using the initial frequency set by the factory (Fig. 1) Please use a small size tool to change the setting.

### OPERATING THE HAND HELD REMOTE CONTROL

#### 1. Light Button:

Press and release the button to turn the light ON or OFF. Press and hold the button to set the desired light brightness. The light will cycle between bright and dim settings as long as the button is pressed. The light key has an automatic auto-resume feature that allows the light to remain at the same brightness as the last time it was turned off. The Up-light button applies to ceiling fans that feature an Up-light only.

#### 2. Speed Buttons

Press and release the button for the desired speed.

#### 3. Reverse Button

Use this button to change the blade rotation.

#### 4. Stop Button

This button stops the fan.

Use the screw provided to install the wall holster on the wall or another convenient location of your choice.

The installation of your new RCS212 Universal Hand Held Remote System is complete.

### CREATING A UNIQUE FREQUENCY

Step: 1. Within 60 seconds of turning the Receivers AC power ON. Press the transmitter's "Stop" button.

**Note: After the AC power is on, do not press any other button on the transmitter before pressing the "Stop" button doing so will cause the procedure to fail.**

Step: 2. Hold the "Stop" button for over 3 seconds, once the receiver has detected the frequency, the down light will flash twice. This will indicate the receiver has learned the frequency that was previously selected on the transmitter.

After completing the steps above, you should be able to operate the ceiling fan and light. If the fan is not responding to the transmitter, please turn the power off to the receiver. And repeat step 1 and 2.

Install the A23, 12v battery included. Remove the battery if not used for long periods of time to prevent damage to the hand held remote

This product is protected by United States Federal and/or State Law, including Patent, Trademark and/or Copyright laws.

Manual design and all elements of manual design are protected by U. S. Federal and/or State Law, including Patent, Trademark and/or Copyright laws.

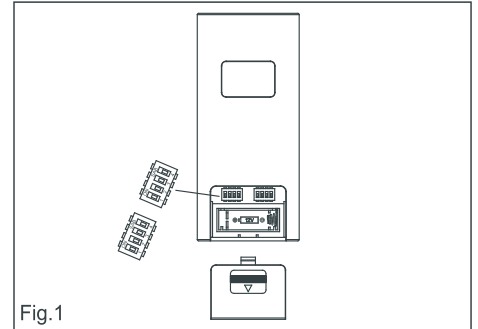 


Fig. 1

