


# 

### DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

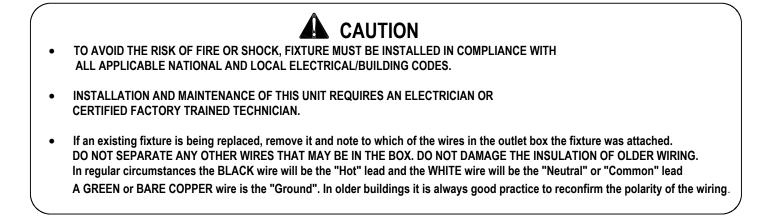

## NOTICE

- The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that
  may occur. it must be understood that common sense, caution and care factors that cannot be built into any product.
  Caution and care must be supplied by the person(s) installing, operating and caring of this lighting fixture.
- This fixture is designed to be mounted on a correctly installed standard round or octagon box or a through wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used. directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

### FIXTURE PREPARATION

1. Remove the fixture, shell/crystal strands, parts and parts bag(s) from the carton.

NOTICE: Before discarding the carton, double check to make certain that all parts are found.

Assemble the support stems to the loops inside the fixture ring. Assemble the support stems to the jump ring.

### FIXTURE INSTALLATION

1. Attach the crossbar to the outlet box. (The green screw should face the floor). Thead the nipple into the crossbar and the hex nut onto the nipple.

NOTICE: THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

 
- Outlet box-Crossbar bar Nipple Ring Canopy Ring Canopy Ring Canopy Chain Chain Parts FIGURE-1
- 2. Remove the threaded ring from the screw collar loop. Fully thread the screw collar loop onto the nipple. Thread the hex nut onto the nipple and the nipple into the crossbar. Place the canopy over the screw collar and against the ceiling. Adjust the nipple so that 1#4" of threads on the screw collar loop extend beyond the canopy. Tighten the hex nut against the crossbar. Using the threaded ring, install the canopy.

3. Open the end links of the chain. Attach the chain to the screw collar loop. Hang the fixture on the chain at the desired height. Remove excess chain. Close the chain links. Unscrew the ring from - the screw collar loop. Allow the ring and canopy to slide down the chain to the fixture.



The use of chain pliers for opening and closing links of chain is required. The used of tools other than chain pliers may damage the chain link resulting in a failure which can cause harm to the fixture, property , and/or person(s).

- 4. Unscrew the ring from the screw collar loop. Let the ring and canopy slide down the chain to the top of the fixture. Thread the lead wires and ground wire (first) through the ring and then the canopy. Thread the wires up through alternating links of the chain to the outlet box.
- 5. When the ceiling is reached, measure 6" beyond the chain and cut off the excess wire. Separate the leads and strip of approx. 182" of insulation from each lead. Twist the strands of wire together. Push the leads and ground wire up through the screw collar loop and nipple and into the outlet box.
- 6. Fasten the bare copper ground wire to the green or bare copper wire in the outlet box or to the green screw on the crossbar.



Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

7. Fasten fixture lead with the ridge(s) to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the tape seals the end of the fastener.

Electrical tape

-Approved fastener ( wire nut )

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

- 8. Connect the smooth fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 7.
- 9. Slide down the canopy and screw collar ring up the chain and secure the canopy to the ceiling.
- 10. Place the shades on the socket covers.
- 11. Install the lamp (light bulbs).

NOTE: This fixture is rated for 60 watt type B, BA, C or CA lamps. (Clear recommended)



12. Restore power to circuit at breaker or fuse box.

