
Assembly Instructions: 7001-6P, 8P, 10P (Carter)

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, contact the place of purchase.

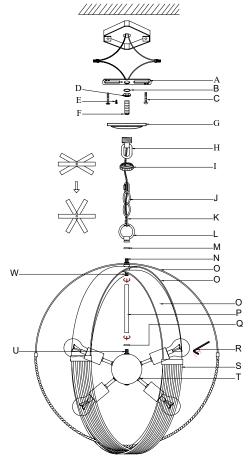


PREPARING FOR INSTALLATION

Gently remove all of the contents from the carton. See the important notes above. Remove the old fixture from the ceiling, including the old mounting strap.

- 1. Place lamping assembly (T) and circular rings (O) of the fixture's body on a flat surface. Please note that it is best to lay the lamping assembly inside the circular rings. Lay the lamping on its side so that post (U) points towards a wall. Line up post (U) with post (W). Be careful to keep the wires in place.
- 2. Spacer (Q) and rod (P) are on the fixture's wires. Thread spacer (Q) onto post (U) of lamp body (T). Thread rod (P) onto post (U). Pull the wires through post (N) until taut.
- 3. Take the mounting strap (A) assembly from the parts bag. One end of nipple (F) should be attached to mounting strap (A) with washer and hex nut (C and D) in place. The other end should have canopy loop (H) attached.
- 4. Use a screwdriver and mounting screws (B) to attach mounting strap (A) to the junction box. (Note: When mounting strap (A) is properly installed, about half of the exterior threads of nipple (F) are exposed, allowing canopy loop (H) to fit snugly onto nipple (F). You may want to test to ensure that, with canopy (G) in place, canopy loop (I) fits onto nipple (F). After testing, remove canopy loop collar (I), canopy (G) and canopy loop (H) from the nipple and place aside for later.

ASSEMBLING THE FIXTURE

- 5. Lift the circular rings (O) and gently rotate lamp body (T) and rod (P) into the threads of post (W). Place washer (M) onto nipple (N) and twist top loop (L) onto the threads. Pull the wires through top loop (L). By measuring, determine the correct number of chain links needed for proper hanging height. If necessary, use a pair of pliers to open and remove any excess chain (J). Attach one chain connector (K) to each end of chain (J).
- 6. Connect one of chain connectors (K) to top loop (L) and close the chain connector. Feed the fixture's wires up through the chain (every three links or so), pulling the wires until taut. Use the free chain connector (K) to attach chain (J) to canopy loop (H). Untwist canopy loop collar (I) to allow canopy (G) to drop down onto the chain/wire.

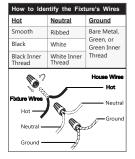

CONNECTING THE WIRES

7. Have an assistant support the fixture's weight while completing the wiring. Cut away the excess wires. Thread the fixture's wires through the canopy loop and nipple. Refer to the wiring diagram and attach the fixture's wires to the power supply wires from the junction box.

Connect Hot to Hot, Neutral to Neutral, and Ground to Ground. Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no house ground wire coming from the junction box, locate ground screw (E) on the mounting bracket/mounting strap and wrap the fixture's ground wire around the ground screw. Use a screwdriver to tighten the top of ground screw (E) onto the wires and into the mounting bracket/mounting strap. Tuck the wires into the junction box.

FINISHING THE INSTALLATION

- 9. Push canopy (G) up to the ceiling. Slide canopy loop (H) and canopy loop collar (I) up beneath the canopy. Tightly thread canopy loop collar (I) onto canopy loop (H) to secure canopy (G) in place.
- 10. Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage. Position the arms. If the decorative twists (R) are loose, use the small tool (Q) to tighten.

Your installation is complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

