ASSEMBLY INSTRUCTIONS: ITEM NO.: BO-2757FL

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LINE THEM UP AS PER THE SKETCH.

2. INSTALL BASE (1) TO POLE (2). TIGHTEN THEM WITH WASHER (3) AND NUT (4) USING A SPANNER.

3. PUT THE WASHER (5) TO THE THREAD OF THE POLE AND THE METAL SHADE (6) AND ANOTHER WASHER (7), TIGHTEN THEM WITH NUT (8).

4. FIX THE WIRE(9) TO THE POLE WITH CLIP (10).

5. INSTALL THE BULB (11, NOT INCLUDED).

**** IMPORTANT INITIAL AND FUTURE ADJUSTMENT INSTRUCTIONS ****
6. SWING THE TOP ARM ALL THE WAY UPWARD TO THE MAXIMUM
ANGLE (150 DEGREES)-ENDING WITH A CLICK (12).
7. SWING THE TOP ARM ALL THE WAY DOWNWARD TO THE MINIMUM
ANGLE (90 DEGREES)-ENDING WITH A CLICK (13).
8. SWING THE TOP ARM UPWARD TO THE DESIRED HEIGHT ADJUSTMENT.
EACH POSSIBLE ADJUSTMENT WILL END WITH A CLICK (14). DO NOT
FORCE DOWNWARD ADJUSTMENTS-TO MAKE DOWNWARD ADJUSTMENTS
RETURN TO STEP 6.


9. INSERT THE POLARIZED PLUG INTO OUTLET, TURN ON THE SWITCH AND ENJOY YOUR LAMP

USE 100 WATTAGE (MAXIMUM) TYPE A BULB (BULB NOT INCLUDED)

*** DO NOT THROW THE SPANNER AWAY FOR FUTURE USE.

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

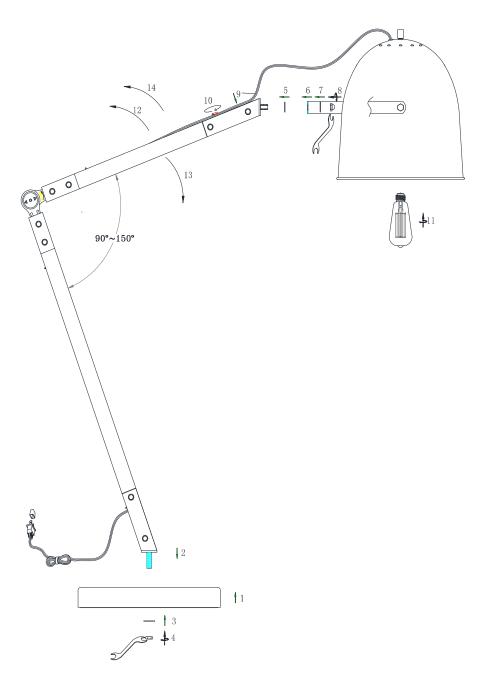

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.