
# Assembly Instructions: 5516-5/5SF (Zara)

## **IMPORTANT:**

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

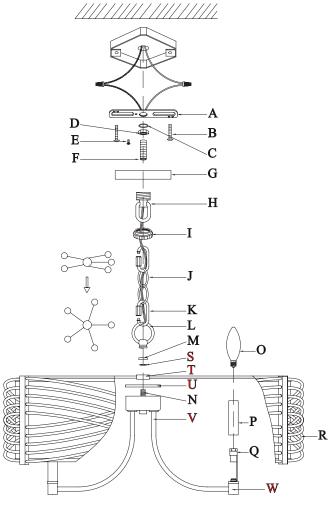

#### PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

- 1. From the parts bag remove the mounting strap assembly. One end of nipple (F) should be attached to mounting strap (A) with washer and hex nut (C, D) in place. The other end should have canopy loop (H) attached.
- 2. Attach mounting strap (A) to the junction box using mounting screws (B) and a screwdriver. Tighten securely. Unscrew canopy loop collar (I) from canopy loop (H). Pass canopy (G) over the mounted canopy loop to test the height. Approximately half of the canopy loop's exterior threads should be exposed, and the canopy loop collar should fit snugly onto the canopy loop. Remove canopy (G) and adjust the height of nipple (F) and canopy loop (H) until the desired height is reached.

## **ASSEMBLING THE FIXTURE**

3. The fixture's arms are packed closed, pull the arms apart. Thread cap (U), spacer (T) and hex nut (S) onto nipple (N). Top loop (L) may be on the fixture's wires, but not threaded onto the fixture's frame. Slide spacer (M) over the threads of nipple (N) of shade (R) before threading top loop (L) onto nipple (N). By measuring, determine the correct number of chain links needed for proper hanging height. If necessary, use a pair of pliers to open and remove any excess chain. For the shortest installation, use attach one of chain connectors (K) to top loop (L) and then connect the chain connector to canopy loop (H). Attach one of chain connectors (K) to each end of chain (J). Use one of chain connectors (K) to attach chain (J) to top loop (L). Close the chain connector. Feed the fixture's wires up through the chain (every three links or so), pulling the wires until taut. Slide canopy loop collar (H) and canopy (G) onto the chain/wire. Use the free chain connector (K) to attach chain (J) to canopy loop (H).

#### **CONNECTING THE WIRES**

4. Have an assistant support the weight of the fixture while completing the wiring. Cut away excess wire. Thread the fixture's wires through canopy loop (H) and nipple (F). Attach the fixture's wires to the power supply wires from the junction box. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) coming from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

#### FINISHING THE INSTALLATION

- 5. Push canopy (G) up to the ceiling and slide canopy loop collar (I) up beneath the canopy. Tightly thread canopy loop collar (I) onto canopy loop (H) to secure canopy (G) in place.
- 6. Reach up through the bottom of the shade and slide candle sleeves (P) onto sockets (Q). Install bulbs (O not provided) in accordance with the fixture's specifications. Do not exceed the maximum wattage.
- 7. Your installation is now complete. Turn on the power and test the fixture.

How to Identify the Fixture's Wires			House Wires
<u>Hot</u>	Neutral	Ground	Flotture Wires
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread	Hot Neutral
Black	White		Neutral — Ground
Black Inner Thread	White Inner Thread		Ground

## **CLEANING TIPS**

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

