INSTALLATION AND SAFETY INSTRUCTIONS

FOR YOUR SAFETY WARNING

BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF: EITHER THE FUSE IS

REMOVED OR THE CIRCUIT BREAKER IS SHUT OFF. GENERAL You don't need special tools to install this fixture. Be sure to follow the steps in the order given. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system. Read instructions carefully. If you are unclear as to how to proceed, consult a qualified electrician. NOTE: Proper wiring is essential for the safe operation of this fixture.

GENERAL

You don't need special tools to install this fixture. Be sure to follow the steps in the order given. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system. Read instructions carefully. If you are unclear as to how to proceed, consult a qualified electrician. **NOTE:** Proper wiring is essential for the safe operation of this fixture.

FIXTURE ASSEMBLY

Carefully remove the fixture from the carton and check that all parts are included as shown in figure. Be careful not to misplace any of the screws or parts which are needed to install this fixture.

STEP 1: Remove the metal trim (J) from the fixture frame (G) by loosening the small nuts (K), insert the Glass panel (I) into the fixture frame (G), then, put the Metal trim (J) back and secure it tight with the small nuts (K)

INSTALLATION

IMPORTANT: Do not attach fixture directly to outlet box.

STEP 1: Use the mounting plate to mark the location of pilot holes, then, drill the holes in ceiling, insert the plastic anchors (A) in Ceiling.

STEP 2: Secure the mounting plate (B) to outlet box with outlet box screws (E) then, tight the mounting plate(B) under ceiling with the mounting screws (C).

GROUNDING INSTRUCTIONS

STEP 1: Insert the green grounding screw into the hole with two raised dimples on the mounting bar. Wrap the ground wire from the fixture (if supplied) around the green grounding screw, then connect it to ground wire from the outlet box (if not fixed on the outlet box) using a wire connector (not supplied).

NEVER CONNECT GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES.

STEP 2: Take note of the color of the wire(s) on your fixture. Identify which group your fixture wire(s) falls into and connect the wires according to the directions below:

connect the wires according to the directions below.	
GROUP A: Connect to Black	GROUP B: Connect to White
House Wire	House Wire
BLACK	WHITE
*PARALLEL WIRE (round &	*PARALLEL WIRE (square &
smooth)	ridged)
WHITE OR GREY WITH	WHITE OR GREY
TRACER	WITHOUT TRACER
BROWNGOLDOR	BROWN, GOLD OR BLACK
BLACK WITHOUT TRACER	WITH TRACER

*NOTE: When parallel wire (SPT-I & SPT-2) is used, the tracer wire is square shaped or ridged and the less tracer wire is round in shape or smooth (seen best when viewed from wire end.)

STEP 3: Take your fixture wire(s) from group A and place evenly against the black wire from the outlet box. Do NOT twist wires together before using wire connectors.

STEP 4: Fit a wire connector (not supplied) over the wires and

screw the connector clockwise until you feel firmness.

STEP 5: Try gently to pull the connector off the wires. If you Can pull the connector off, carefully re-do steps 3 and 4 as above, and check again for a firm connection.

STEP 6: Connect the fixture wire from group B to the white wire from the outlet box in the same manner. Make sure no bare wires can be seen outside wire connectors.

FINAL ASSEMBLY

STEP 1: After wires are connected, tuck them carefully inside outlet box. Raise the fixture frame (G) allowing for the mounting screws (F) to protrude through the holes on Ceiling Pan, and secure with ball nuts (H).

STEP 2: Install light bulbs. (Bulb not included) (Please do not exceed the maximum capacity recommended on the socket.).


STEP 3: Raise the glass panel (M) to the fixture bottom, then secure it with plastic washer(N) and cap nut (O).

CLEANING

To clean wipe fixture with a soft cloth. Clean glass with a mild soap. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

ORDERING PARTS

Keep this sheet for future reference, and in case you need to order replacement parts. Be sure to use exact wording from illustration when ordering parts.

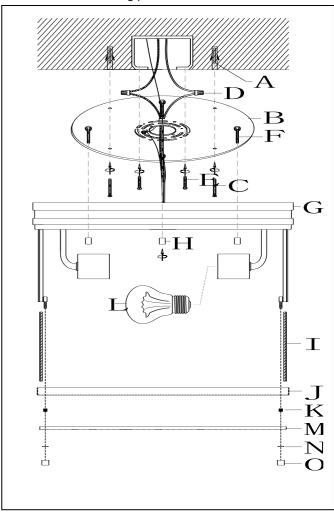

Line art shown may not exactly match the fixture enclosed. However, the installations do apply to this fixture.

ITEM NO: 7504FR18 7504FS18