


ASSEMBLY INSTRUCTIONS.

SILLA OUTDOOR DINING CHAIR BLACK-M2
QX-1010-02

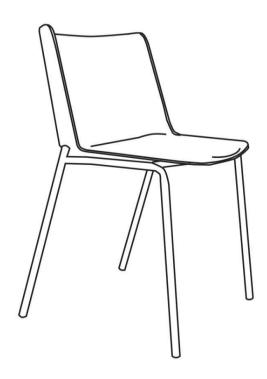

THANK YOU FOR YOUR PURCHASE!

PARTS AND HARDWARE.

PARTS LIST

| No. | DESCRIPTION | IMAGE | Q'TY |
|-----|-------------|-------|------|
| P1 | SEAT | | 1 |
| P2 | METAL LEGS | M | 1 |

HARDWARE LIST


| No. | DESCRIPTION | IMAGE | Q'TY |
|-----|-----------------------------|----------|------|
| H1 | BOLT (6X16MM) | (i) | 4 |
| H2 | SPRING WASHER (6X10X1MM) | O | 4 |
| НЗ | FLAT WASHER (6X18X2MM) | 0 | 4 |
| H4 | ALLEN KEY | | 1 |

NOTES.

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: Ensure not to overtighten screws to reduce the risk of stripping or breakage.

STEP 1.

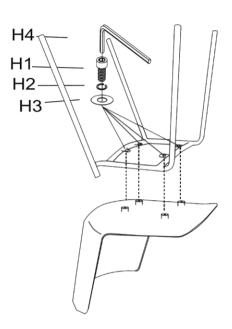

STEP 2.

