


ASSEMBLY INSTRUCTIONS

ITEM NO : BO-314-AB/BS/RU/DB

1. CAREFULLY UNPACK AND LAY OUT THE PARTS AS SHOWN IN ILLUSTRATION.
2. SCREW THE CONNECTOR (B),POLE (C),POLE (D) SOCKET PART (E) ONTO THE BASE (A) IN TURN.
3. PUT THE HARP (F) INTO THE SOCKET PART (E).
4. PUT THE SHADE (NOT INCLUDED) ONTO THE HARP (F) AND SCREW IT TIGHTLY BY FINIAL (G).

YOUR LAMP NOW IS READY TO ENJOY

USE 3-WAY 150W WATTAGE (MAXIMUM) TYPE
A

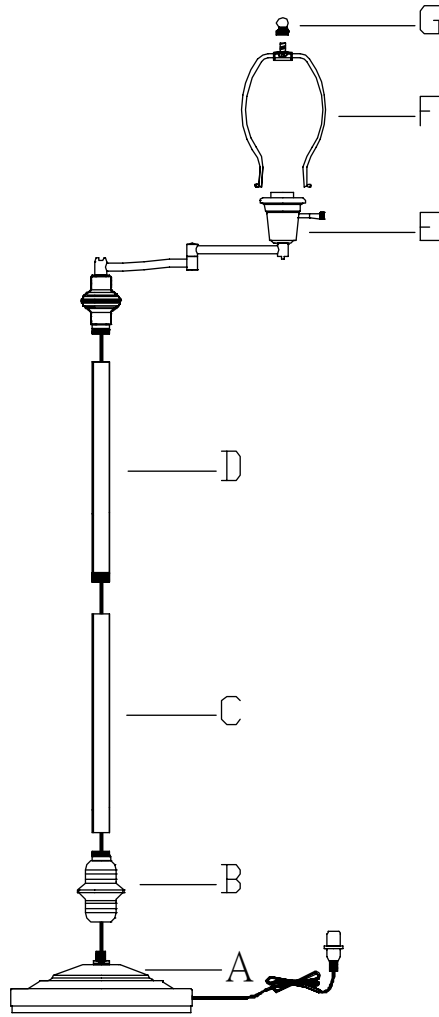

IMPORTANT SAFETY INSTRUCTIONS :

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDEER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT,CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE