

- 8. FIX THE WIRE COVER (J) INTO THE WALL WITH WOOD SCREW(I), THEN PUT THE WIRE (L) STRAIGHT IN THE WIRE COVER (J).
- 9. PLACE THE UPPER WIRE COVER (K) ONTO THE BOTTOM WIRE COVER (J) TO RIGHT WAY.
- 10. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

WATTAGE: 60W TYPE A (BULB NOT INCLUDED)


IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACTA QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY INSTRUCTIONS ITEM NO: LA-8005WL-1R THE LAMP HAVE TWO OF MEANS TO ASSEMBLE: THIS IS FIXTURE.

- 1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
- 2. CUT OFF THE WIRE AT THE LENGTH OF 6"-8"(S), (THE LENGTH REFER TO THE DISTANCE FROM LAMP BODY TO THE END OF WIRE).AND PEEL 14MM, THEN DRAW BACK INTO THE BASE AND BECAME POWER CORD (J).
- 3. PLACE THE TUBE STOPPER (Q) INTO THE BASE HOLE (P).
- 4. CONNECT THE POWER CORD (B) AND (J) WITH THE WIRE NUT CONNECTORS (C).THEN SCREW THE GROUD WIRE (D) AND (I) WITH THE SCREW (G).

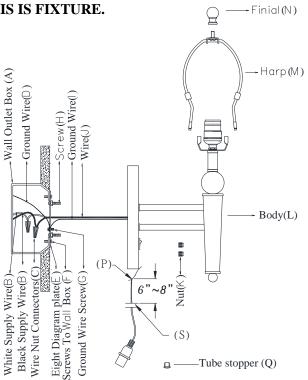

- 5. SCREW THE EIGHT DIAGRAM PLATE (E) ONTO THE WALL OUTLET BOX (A) WITH THE SCREW (F).
- 6. SCREW THE LAMP BODY (L) ONTO THE WALL THROUGH THE SCREW (H) WITH THE NUT (K).
- 7. INSERT THE HARP (M) INTO THE SADDLE OF THE LAMP BODY (L), THEN PLACE THE SHADE (NOT INCLUDED) ONTO THE HARP (M), SCREW THE FINIAL (N) TO SECURE THE SHADE.
- 8. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

WATTAGE: 60W TYPE A (BULB NOT INCLUDED)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACTA QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.