

ASSEMBLY AND INSTALLATION INSTRUCTIONS

LK55512

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.


 
NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

Hardware Package (included): For Ceiling Light

AA		Mounting Strap X1	EE		Mounting Screw X2	II		Green Ground Screw X1	MM		Ground Pad X1
BB		Wire Connector X3	FF		Fixture Mounting Screw X2	JJ		Washer X2	NN		Fixture Ground Wire X1
CC		Hex Nut X2	GG		Lock Nut X2	KK		Threaded Pipe X1	OO		Final X1
DD		Top Cap X1	HH		Canopy X1	LL		Bolt Nut X2	PP		Coupling X1

Hardware Package (included): For Light Kit

QQ		Hex Nut X1	RR		Washer X1	SS		Wood Bead X1
----	--	------------	----	--	-----------	----	--	--------------

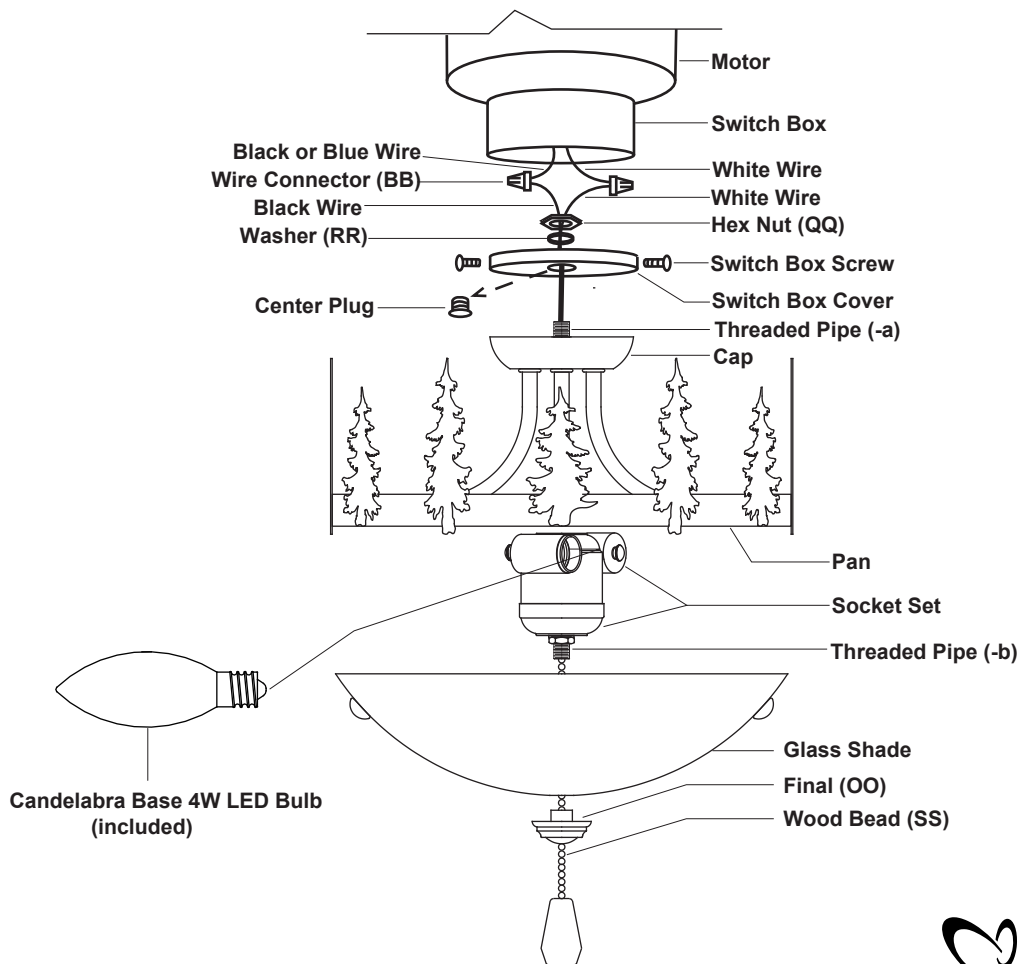

For Light Kit:

Installation Steps

Turn off the power at fuse or circuit box.


1. Remove the switch box cover from the switch box of the fan by loosening the three switch box screws.
2. Unscrew the center plug from the switch box cover and discard it.
3. Thread the fixture wire through the switch box cover.
4. Attach threaded pipe (-a) of the light kit to the switch box cover, then secure it with a washer (RR) and hex nut (QQ).
5. Cut the redundant wires if necessary. Pull out the wires from the switch box. Make wire connections using the wire connectors (BB):
 - The black wire from the fixture to the black (or blue) wire from the switch box.
 - The white wire from the fixture to the white wire from the switch box.Carefully put the wires back into the switch box.
6. Attach the switch box cover back to the switch box using the three switch box screws.
7. Install bulbs (included). See relamping label at socket area or packaging for maximum allowed wattage.
8. Thread the pull chain through the glass shade and the finial (OO). Carefully attach the glass shade to the pan by inserting threaded pipe (-b), then secure it with the finial (OO).
9. Turn on the power at the main fuse or circuit breaker box. (You can control the light with the wood bead (SS).)

For Ceiling Light:

Turn off the power at fuse or circuit box.

1. Take out the coupling (PP), two hex nuts (CC), washer (JJ), threaded pipe (-c) (KK), top cap (DD), canopy (HH), washer (JJ) and ground pad (MM) from the hardware package for ceiling light.
2. Secure the coupling (PP) to threaded pipe (-d), then threaded pipe (-c) (KK) into the coupling (PP) and secure it with a washer (JJ) and hex nut (CC).
3. Attach the top cap (DD) with the open side facing downward and the canopy (HH) with the open side facing upward to the fixture by inserting threaded pipe (-c) (KK), then secure them with a washer (JJ), ground pad (MM) and hex nut (CC).
4. Attach two fixture mounting screws (FF) to the mounting strap (AA), then secure them with two lock nuts (GG). Adjust the length of the fixture mounting screws (FF) if necessary.
5. Attach the mounting strap (AA) to the outlet box by using two mounting screws (EE).
6. Pull out the outlet wires and the house ground wire from the outlet box. Make wire connections using the wire connectors (BB):
 - The black wire from fixture to the black wire from the outlet box.
 - The white wire from fixture to the white wire from the outlet box.
 - Attach the fixture ground wire (NN) to the mounting strap (AA) with the green ground screw (II). Then connect it to the house ground wire with a wire connectors (BB).Carefully put the wires back into the outlet box.
7. Attach the canopy (HH) to the mounting strap (AA) by inserting two fixture mounting screws (FF), then secure them with the bolt nuts (LL).
8. Follow steps 7~9 as for Light Kit.

Turn on the power at fuse or circuit box.

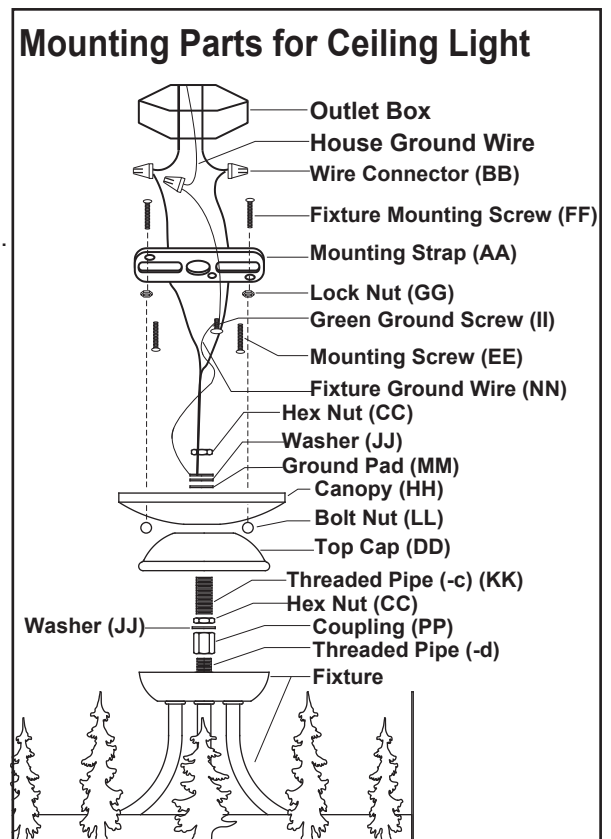

The following parts are available for re-order if damaged or missing.


Spare Parts List:

AA		Mounting Strap X1	EE		Mounting Screw X2	II		Green Ground Screw X1	MM		Ground Pad X1
BB		Wire Connector X3	FF		Fixture Mounting Screw X2	JJ		Washer X2	NN		Fixture Ground Wire X1
CC		Hex Nut X2	GG		Lock Nut X2	KK		Threaded Pipe X1	OO		Final X1
DD		Top Cap X1	HH		Canopy X1	LL		Bolt Nut X2	PP		Coupling X1

↑ Assembly Kit
6127MM
(1 SET)

QQ		Hex Nut X1	RR		Washer X1	SS		Wood Bead X1
----	--	---------------	----	--	--------------	----	--	-----------------


↑ Assembly Kit
6126MM (1 SET)

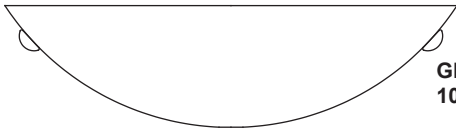

Glass Shade
10197AF



Candelabra 4W LED Blub
8096LD

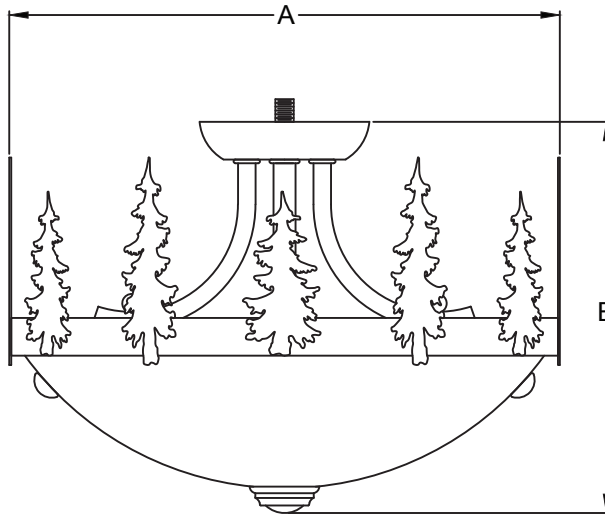

A: 11-3/4"

B: 8-1/4"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com
1-800-482-9235

