



## ASSEMBLY INSTRUCTION

### Parts:

A: Finial	H: Lower square part
B: Clip	I: Base
C: Shade	J: Wooden piece
D: Harp	K: Weighted
E: Saddle	L: Metal washer
F: Upper square part	M: Nut
G: Center pipe	N: Wrench

### Steps:

1. Carefully remove all parts from package.
2. Screw the center pipe (G) in the bottom of the upper square part (F).
3. Place the lower square part (H), weighted (K) wooden piece (J) on the upper square part (F). Then secure them with the metal washer (L) and the nut (M) by the wrench (N).
4. Place harp (D) on saddle (E) and place shade (C), clip (B) on harp (D). Then secure it with finial (A).

### IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted.

Do not alter the plug.  
85-2470-20 (P8697)

