



# INSTALLATION INSTRUCTION

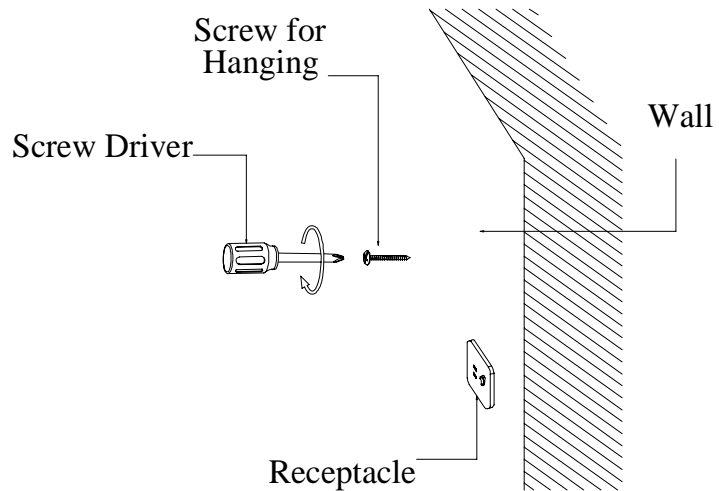

Rotate the hanging screw on the wall by screw driver.

NOTE : Leave a couple of rotation of screw unscrewed on the wall.

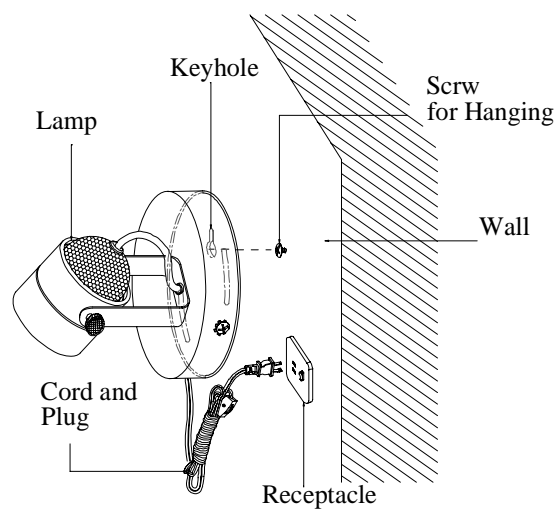

1. Hanging the keyhole on the backplate of base through the screw.

2. Plug in.

3. Adjust the head to your desired direction.

**SAVE THESE INSTRUCTIONS**