


ASSEMBLY AND INSTALLATION INSTRUCTIONS

H0278

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instructions.

Hardware Package (included):

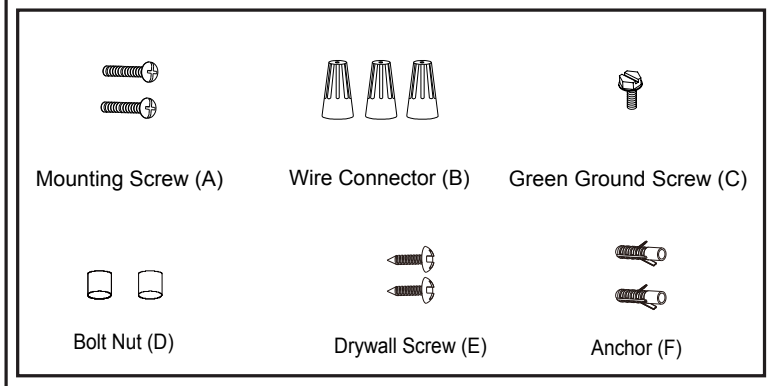

Installation Steps

Turn off the power at fuse or circuit box


1. Unscrew the bolt nuts (D), take out the mounting plate and then attach to the outlet box by using two mounting screws (A).
2. Attach the mounting Plate to the ceiling using the drywall screw (E) and Anchor (F)

3. Rod Connections:

- a. Thread the fixture wire from the shade through the lower rod, then secure the lower rod onto shade using the threaded pipe.
- b. Thread the fixture wire through the middle rod and then secure the middle rod onto the lower rod using the threaded pipe.
- c. Thread the fixture wire through the upper rod, then secure the upper rod onto the middle rod using the threaded pipe.

Note: Length adjustable from 15-3/4" to 60-3/4". Use fewer rods if shorter length is desired.



4. Thread the fixture wire through the canopy kit, then secure the rod assembly to the set threaded pipe of the canopy kit.
5. Pull out the source wires from the outlet box. Make wire connections using wire connectors (B) as follows:
 - Connect the smooth-coated wire (marked) from the power source to the black wire from the fixture.
 - Connect the ribbed-coated wire (unmarked) from the power source to the white wire from the fixture.
 - Attach the fixture ground wire (bare wire) to the mounting plate with the green ground screw (C), or connect to the source ground wire if available.Carefully put the wires back into the outlet box.

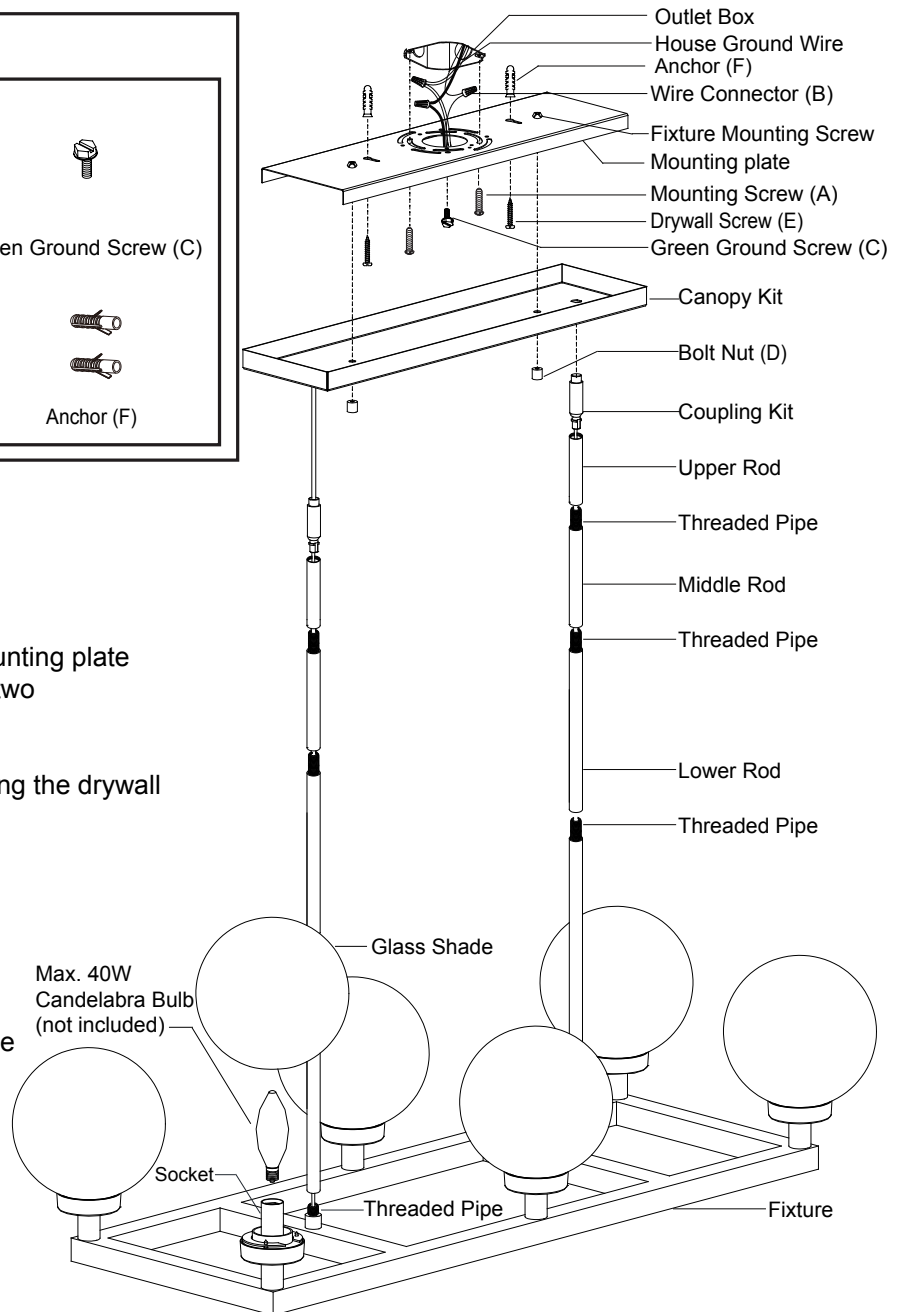

6. Attach the fixture onto the mounting plate and tighten it with two bolt nuts (D).
7. Install 6 x 40W Max. candelabra base bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed.
8. Attach the glass shade onto the socket and tighten it.

Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.

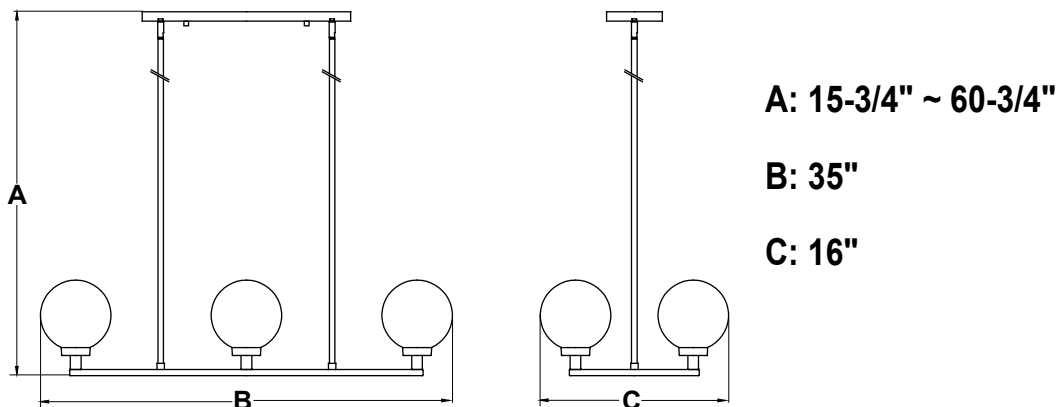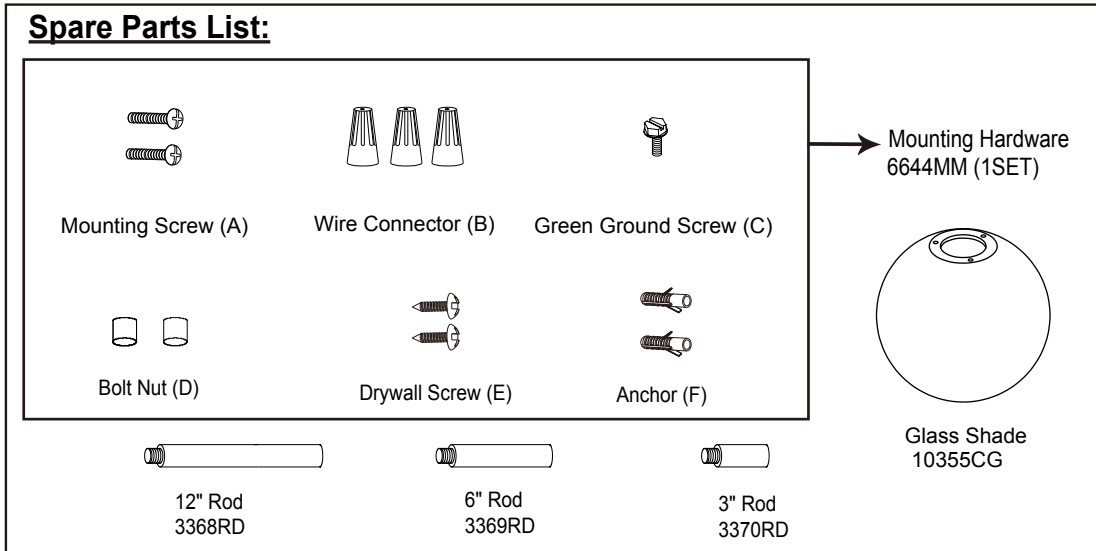

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?
 info@vaxcel.com
 1-800-482-9235