


ASSEMBLY INSTRUCTIONS

Item#L32003FDS

1. FASTEN SOCKET ASSEMBLY ONTO LAMP BODY BE CAREFUL NOT TO TWIST THE POWER CORD.
2. PLACE HARP ONTO SADDLE.
3. PLACE SHADE ONTO HARP AND TIGHTEN FINIAL.
4. PLACE USE MAX 60W TYPE "A" BULB (BULB NOT INCLUDED)

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

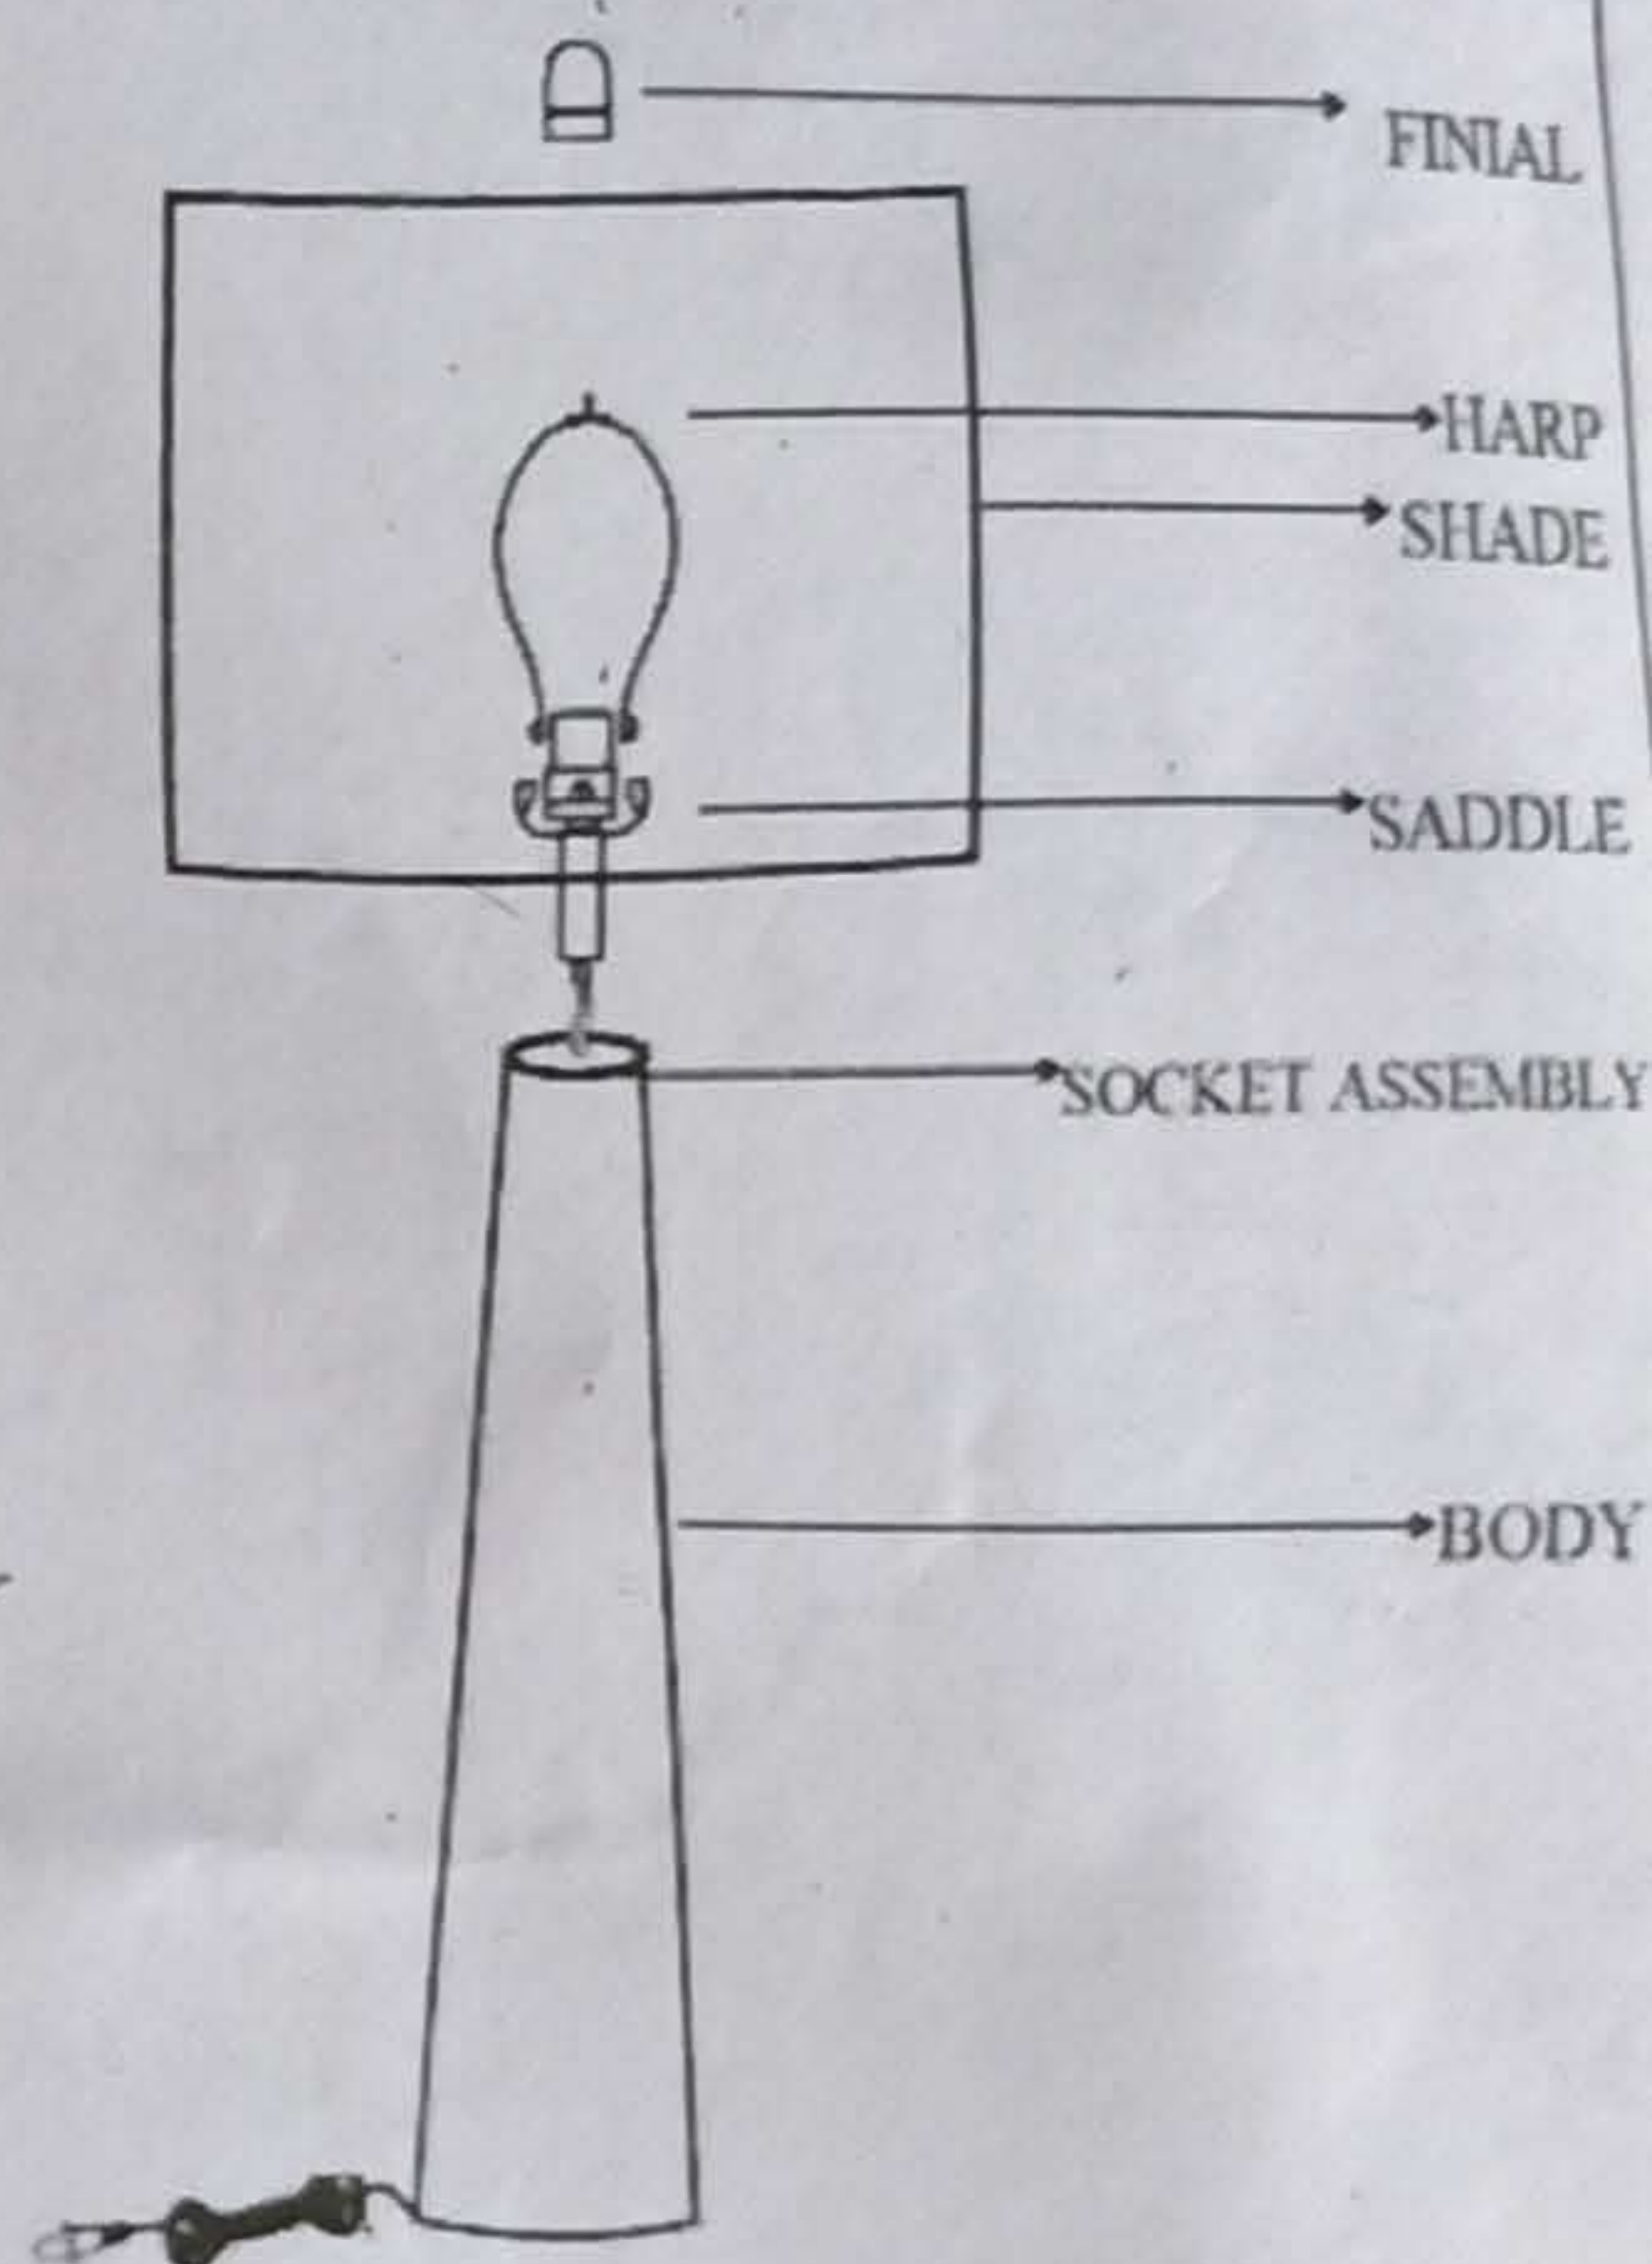

INSTRUCTIONS DE MONTAGE

L32003FDS

1. FIXER LA DOUILLE SUR LE CORPS EN PORTANT ATTENTION À NE PAS TORDRE LE CORDON.
2. PLACER LA LYRE SUR LA SELLE.
3. PLACER L'ABAT-JOUR SUR LA LYRE ET SERRER LE FAÎTEAU.

4. UTILISER UNE AMPOULE 60 WATTS MARCHÉ/ARRÊT SUR LA LAMPE (AMPOULE NON INCLUSE)

IMPORTANTES CONSIGNES DE SÉCURITÉ

CETTE LAMPE PORTABLE EST MUNIE D'UNE FICHE POLARISÉE (UNE LAME PLUS LARGE QUE L'AUTRE) PAR MESURE DE SÉCURITÉ AFIN DE RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE. CETTE FICHE S'INSÈRE DANS UNE PRISE POLARISÉE D'UNE SEULE MANIÈRE. SI LA FICHE NE S'INSÈRE PAS COMPLÈTEMENT DANS LA PRISE, INVERSER LA FICHE. SI ELLE NE S'INSÈRE TOUJOURS PAS, COMMUNIQUER AVEC UN ÉLECTRICIEN QUALIFIÉ. NE JAMAIS MODIFIER LA FICHE.

