


Assembly Instructions for SCONCE with 2 Side Holes

We recommend installation of this fixture be done by a licensed electrician. Turn off power at the main fuse or circuit breaker box.

** Actual parts may vary slightly depending upon the model

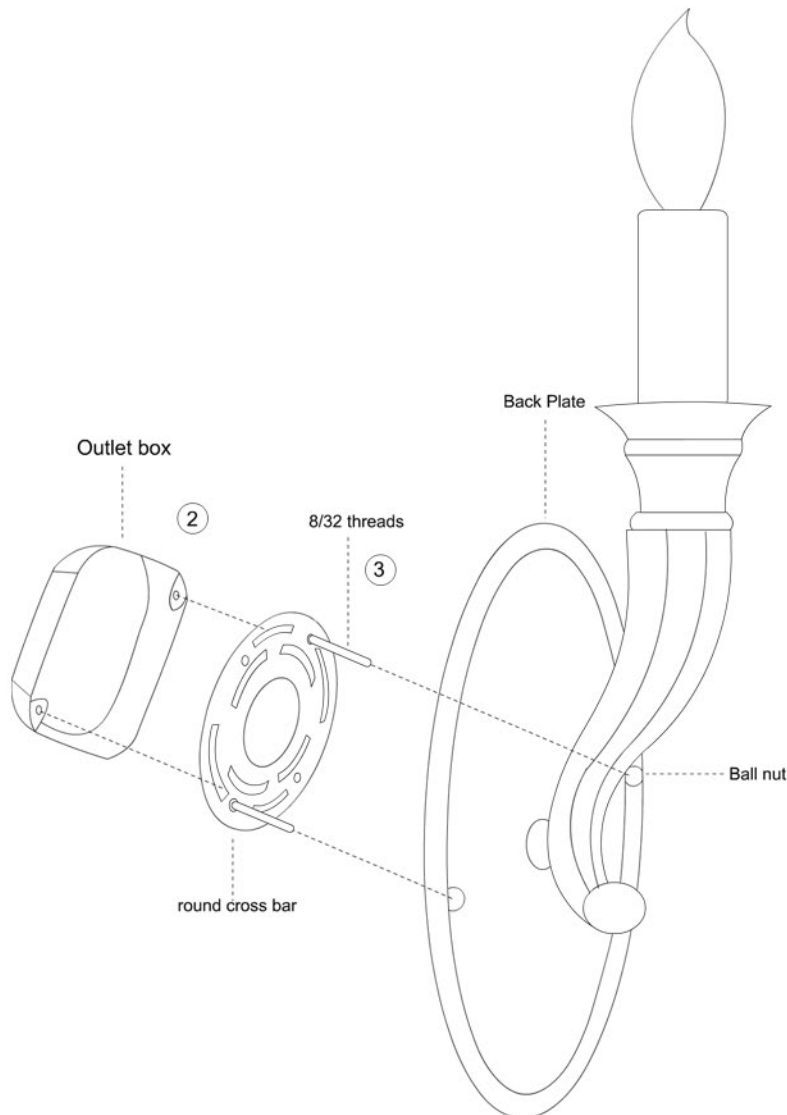

1. Remove all parts carefully from the box before discarding the carton.
2. Attach the cross bar to the outlet box (screws not provided) with ground screw facing out.
3. Thread the 8/32 threads into the cross bar; about 1/4" should extend beyond the backplate
4. Fasten ground wire to green screw. Fasten lead wire (or white wire) with ridges to the white wire. Use wire nut to fasten it.
5. Fasten smooth (or black wire) lead wire to the black wire in the box & use wire nut to fasten it.
6. Place fixture over the wall the outlet box going through 8/32 threads.
7. Secure the fixture with ball nut
8. Install bulbs (not included)
9. Restore circuit breaker.