


Instructions for electrician **STEPS 2 - 9**

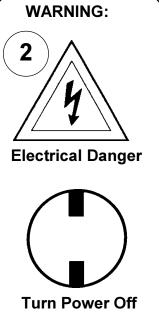

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

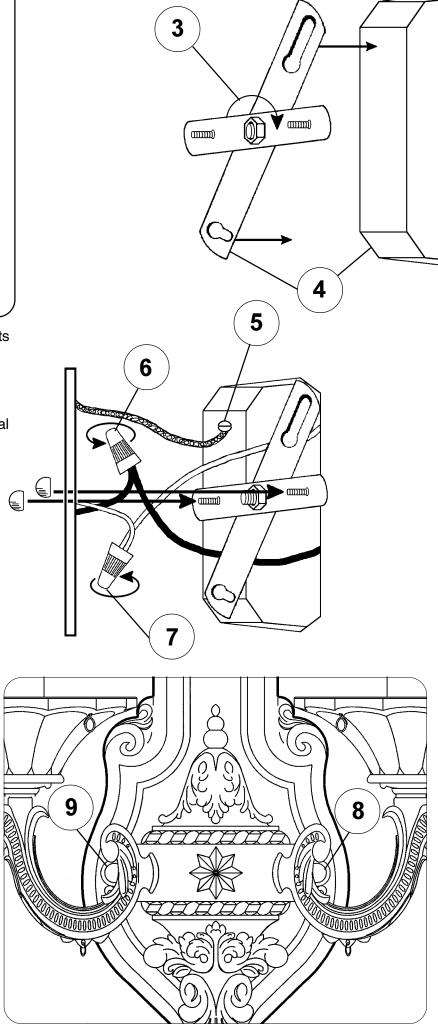

CHANDELIER 5070- ____A TRIM DIAGRAM

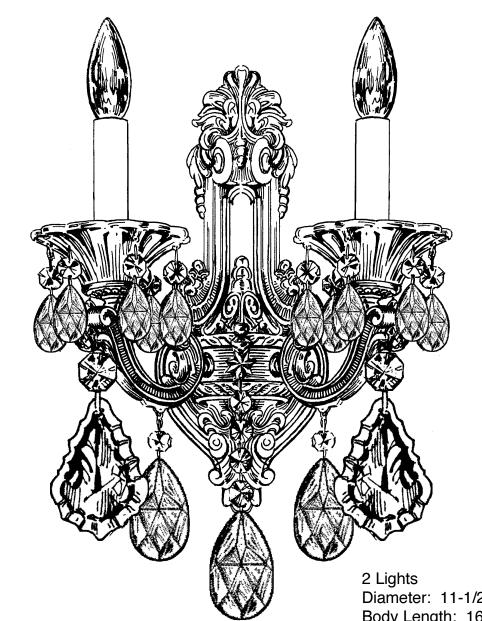

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SCHONBEK WORLDWIDE LIGHTING INC.



| | | on who llowing | - |
|--------|-----|-------------------|-----|
| CODE | # | | Fou |
| PACKEF | R # | | See |
| | # | | See |

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D292,620, #D335,362, #D335,546, #D335,716, #D335,720, #D336,537, #D338,082, #D389,264, #D338,278, #D339,879, #D345,815, #D373,441, #D374,102, #D374,103, #D374,498, #D382,077, #D393,325, #D397,495, #D397,494, #D403,101, #D435,686, #D454,973, #D454,974, #D455,224, #D456,940, #D463,602S, #D463,603S, #D464,769S, #D468,480, #2,651,806, #5,104,082, #5,109,325, #5,116,009, #5,144,541, #5,205,644, #5,222,805, #5,241,460, #5,255,173, #5,258,900, #5,285,364, #5,404,285, #5,460,269, #5,567,046, #5,567,468, #5,573,330, #5,577,838, #5,588,744, #5,873,652, #5,906,430, #5,921,668 & #6,241,370B1



(Finish Option)

Diameter: 11-1/2" Body Length: 16-1/2" Extension: 6-1/2" Hanging Weight: 5 lbs.


SCHONBEK[®]

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

IMPORTANT

ens carton should record the ormation for future service. ur-digit number on outside of carton. e crystal package label. e crystal package label.

Instructions for crystal trimming STEPS 10 - 14

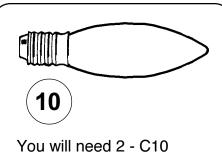

25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

