


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2856FL

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

- 1.SCREW POLE (C) CLOCKWISE INTO POLE (D) TO TIGHTEN.
- 2.SCREW POLE (D) CLOCKWISE INTO POLE (E) TO TIGHTEN.
- 3.SCREW POLE (E) CLOCKWISE INTO CONNECT PART (F) TO TIGHTEN.
- 4.USSCREW THE WASHER (I) AND SCREW NET (J) FORM THE THREADED TUBE.
- 5.PLACE THE PLASTIC BALANCE WEIGHT (H) INTO THE METAL COVER (G) AND TIGHTEN BY SCREWING NUT (J) , WASHER (I) ONTO THREAD END CLOCKWIRE . GET THE REMAINING SLACK OF THE POWER CORD (K) OUT FORM BASE HOLD. MAKE SURE CORD IS FACING THE BACK OF LAMP WHEN TIGHTENING SCREW NUT, AFTER THIS STEP, SATAND IN ON THE GROUND.
- 6.PUT THE SHADE RING (A) HANDING INTO POTHOOK (B) .
- 7.INSTALL BULB (L) (INCLUDED) INTO THE SOCKET.
- 8.INSERT THE POWER PLUG INTO AN OUTLET AND ENJOY !!

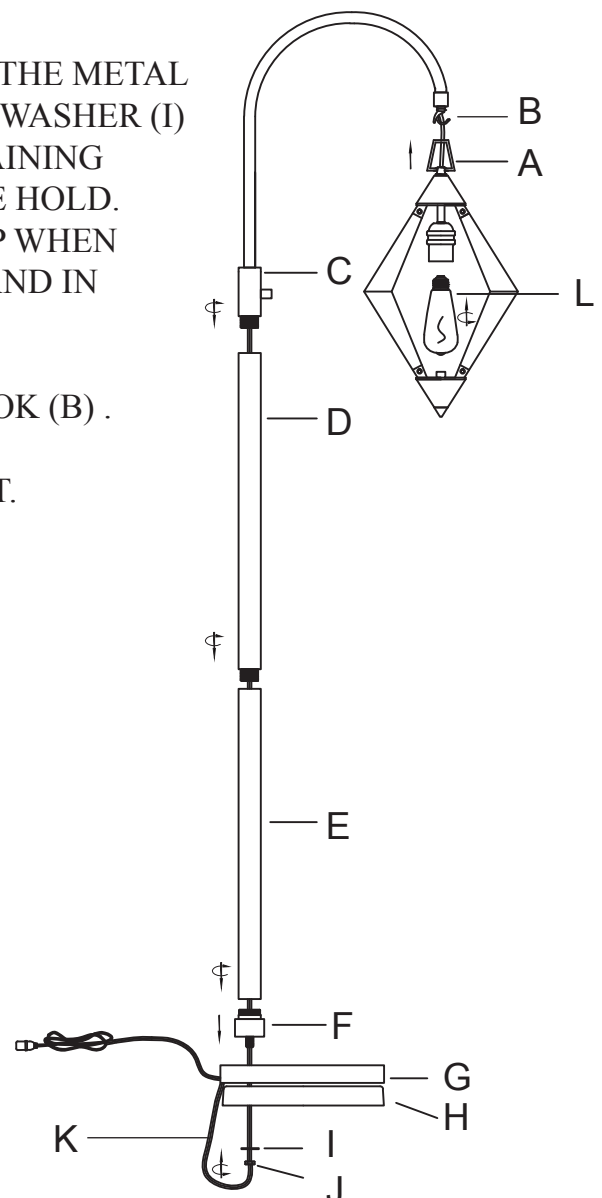

Use MAX 1x60 Wattage type A (Bulb included)

IMPORTANT SAFETY INSTRUCTIONS:

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.