

Assembly & Installation Instructions for: 032021-010-FR001 6-Light Wall lamp

# BY KALCO LIGHTING

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

WARMING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electricalwiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture ,make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a coltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattge specified on the socket label.

# **Fixture Assembly** Step 1. Place mount mounting and wiring steps before crystal installation step Step 2. Fix part metal mesht , metal sheet A to part ĩ Main body by using screw Metal mesht Metal sheet A Step 3. Fix part metal sheet B to part Main body by using flat screw Step 4. Lnstall candelabra bulbs bulb, do not use Main body bulbs that exceeds 60W E12/60W/bulbs Metal sheet B Д



Assembly & Installation Instructions for: 032021-010-FR001 6-Light Wall lamp

### BY KALCO LIGHTING


Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com


#### **Fixture Assembly**


#### ATTENTION


- 1. Take all crystal or glass parts carefully from carton, then put them on a clean cloth.
- 2. Start hanging crystals from bottom center to top of fixture in an alphabetical order as shown in diagram



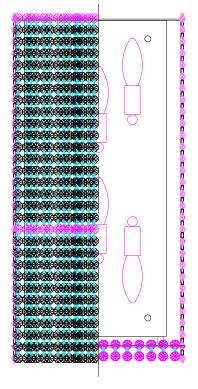



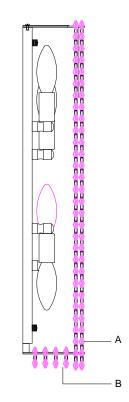

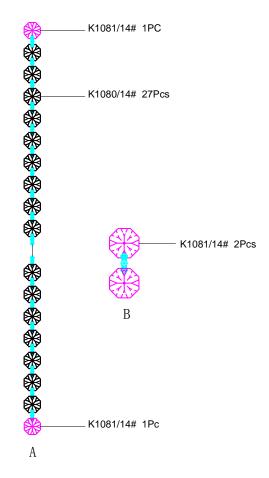



Assembly & Installation Instructions for: 032021-010-FR001 6-Light Wall lamp

## BY KALCO LIGHTING

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

#### **Fixture Assembly**

- Step 5. Fasten 2 (state specification of screw ) into mounting plate so that they extend away from wall when mounting plate is installed
- Step 6. Attach the mounting plate to outlet box with sorews
- Step 7. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector
- Step 8. Carefully tuck in all wires Attach the backplate with the mounting screw on the crossbar.Secure fixture with shell hnobs.

