



ASSEMBLY AND INSTALLATION INSTRUCTIONS

C0268

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

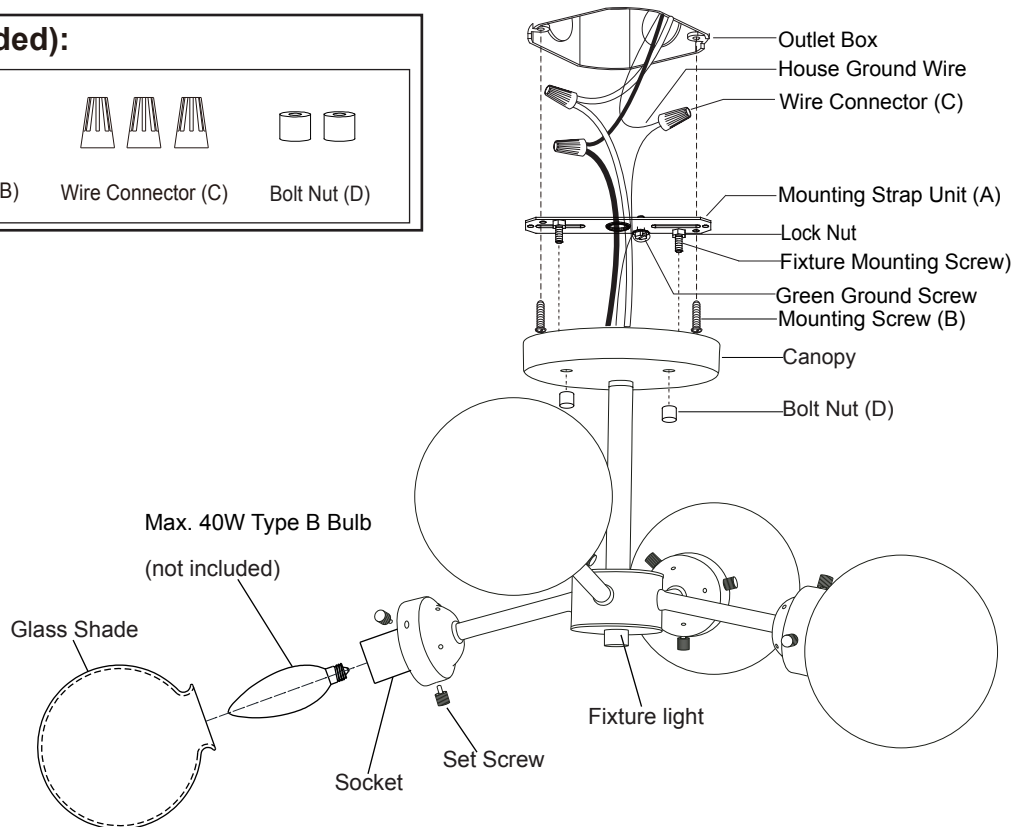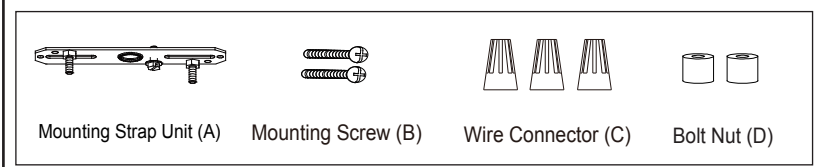

Installation Steps






Turn off the power at fuse or circuit box


1. Unscrew two bolt nuts (D) and remove mounting strap unit (A) from the canopy.
2. Attach the mounting strap unit (A) to outlet box by using two mounting screws (B).
3. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the black wire from the fixture to the black wire from the power source.
 - Connect the white wire from the fixture to the white wire from the power source.
 - Attach the fixture ground wire to the mounting strap with the green ground screw, then connect it to the house ground wire with a wire connector.Carefully put the wires back into the outlet box.
4. Attach the canopy onto the mounting strap unit (A) and tighten it with two bolt nuts (D).
5. Install 4 X 40W Max. candelabra base bulbs (not included). Check relamping label at socket area or packaging for maximum wattage allowed.
6. Attach the glass shade onto the socket and tighten it with set screws.

Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.

Spare Parts List:

				→ Assembly Kit 6512MM (1SET)	 Glass Shade 10298CS
Mounting Strap Unit (A)	Mounting Screw (B)	Wire Connector (C)	Bolt Nut (D)		

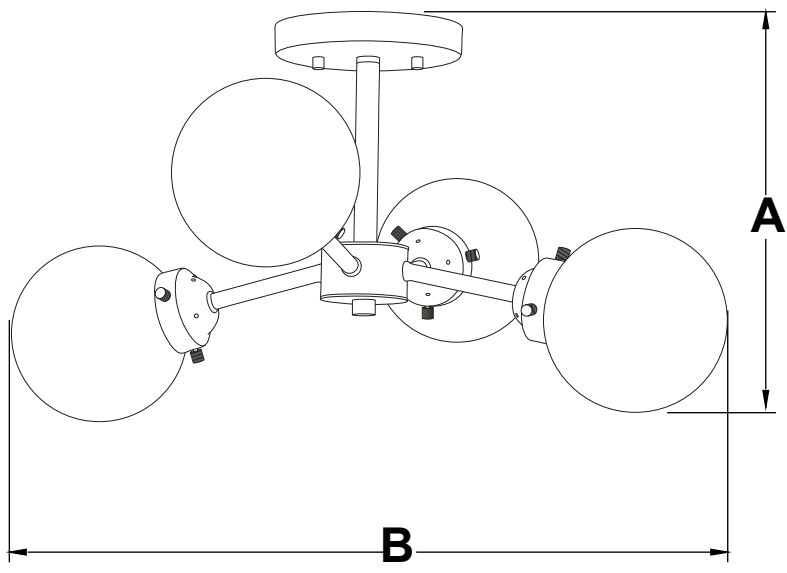

A: 10-1/2"

B: 20"