

ASSEMBLY AND INSTALLATION INSTRUCTION

For Line Voltage One Light W/Aircraft Cord


WARNING : Before starting installation, turn off power by removing fuses or turning off circuit breakers. Turning off the power by using the light switch is not sufficient to prevent electrical shock. If you feel you do not have electrical experiences needed, have the fixture installed by a qualified licensed electrician.

CAUTION : This is just an installation "guide ". Pls check with your local certified electrician for proper installation per your city code. We can not be held liable for the use or misuse of the installation guide provided.


Preparation for wiring :

1. Thread cord through knob, canopy, nipple, strap. Measure your desired length of cord A. Then thread the cord into strain relief (from one hole to the other) like the picture shows and adjust the strain relief to the B. Leave additional length of 5" from B to C and cut off the unnecessary cord.

NOTICE : If there is any difficulty in threading the cord into the knob of canopy, be sure to flatten the Neutral woven wire so that it can thread into the knob of canopy without any difficulty.

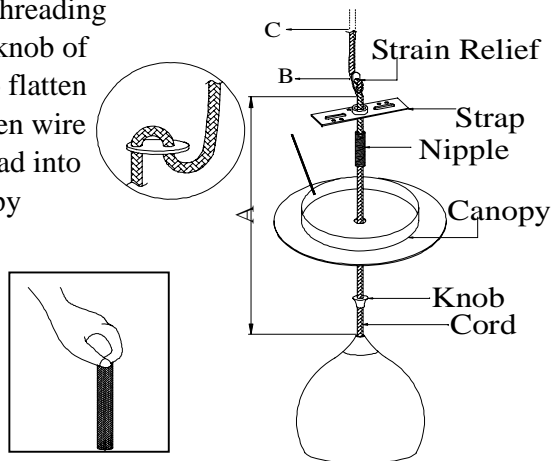


2. Pull down the Neutral woven wire from the cord about 2".
3. Within the length of 1-1/2" D on the cord near the end, make a mark E, use knife to slightly cut the cord.

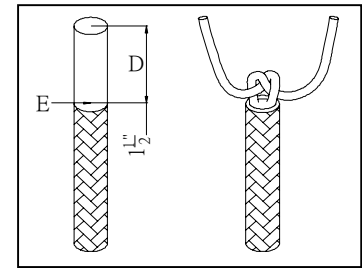

CAUTION : Cutting too deep in the cord may cut two wires inside.

4. Peel off the length of cord outside D, leave 2 wires inside and tie a knot.
5. Peel off the length of 2 wires 3/8" near the end and expose the copper for wiring.

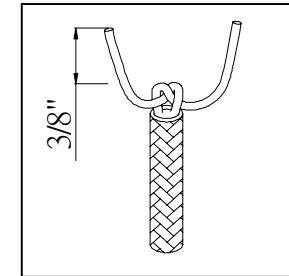

Wiring :

1. Rotate nipple (A) into the strap.
2. Mount strap (B) securely to outlet box with 2 pcs of 5/32" screws (C) provided.
3. Hold the plate (D) and attach BK fixture wires to BK house wire, WH fixture wire to WH house wire with wire connectors.
4. Attach Green house wire and Green fixture wire to Green Grounding screw on strap.
5. Tuck the wires into the outlet box.
6. Push the canopy toward nipple until nipple protrudes the hole in the canopy, and at the same time pull down the cord (E) until the strain relief (F) touch the nipple.
7. Cap and rotate the knob (G) until canopy is tight.
8. Turn on power.

