


Assembly Instruction Sheet #IS-9697W/16 For Style 9697W/16

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (3) E12 Base Bulb only (Included/Not Included)
Estimated Assembly Time: 15-30 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents



▲ Fixture Body x1

76mmx2



□ Crystal x13

Hardware Contents

PART	DESCRIPTION	QUANTITY
AA	Wiring Kit	2pcs
CC	Screw	2pcs

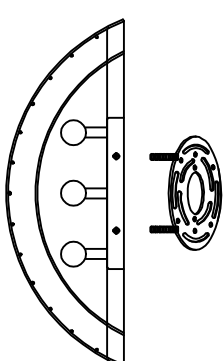


Figure 1

STEP 2 - Attach Mounting Bracket to Outlet Box
 A. Pass the supply wires through the mounting bracket (EE). Attach the mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw feeding you. Secure it with Outlet Box Screws. Tighten until snug.

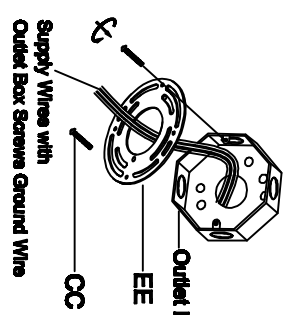


Figure 2

STEP 3 - Wire Connections
 A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

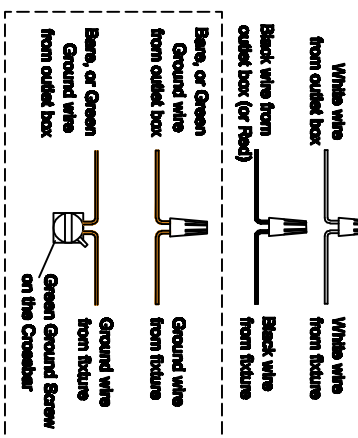


Figure 3

STEP 4 - Install Backplate to Ceiling

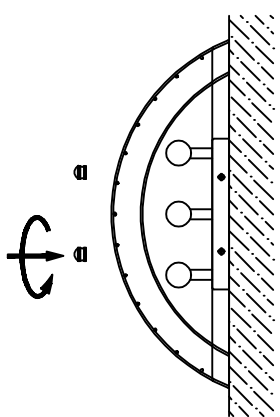


Figure 4

STEP 5 - Install bulb and Crystal

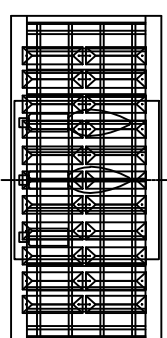



Figure 5