


ASSEMBLY INSTRUCTIONS:

ITEM NO : BO-2355TB

1. Carefully unpack the carton and then lay out all the parts on the flat surface.
2. Screw Socket Section (B) into the Lamp body (A) tightly, then screw Stem(C) into the cord box of Socket section(B).
3. Put Plastic pad (D) and Shade (E) on Stem (C) respectively.
4. Make the Shade (E) keep horizontal before tightening it by Finial (F).

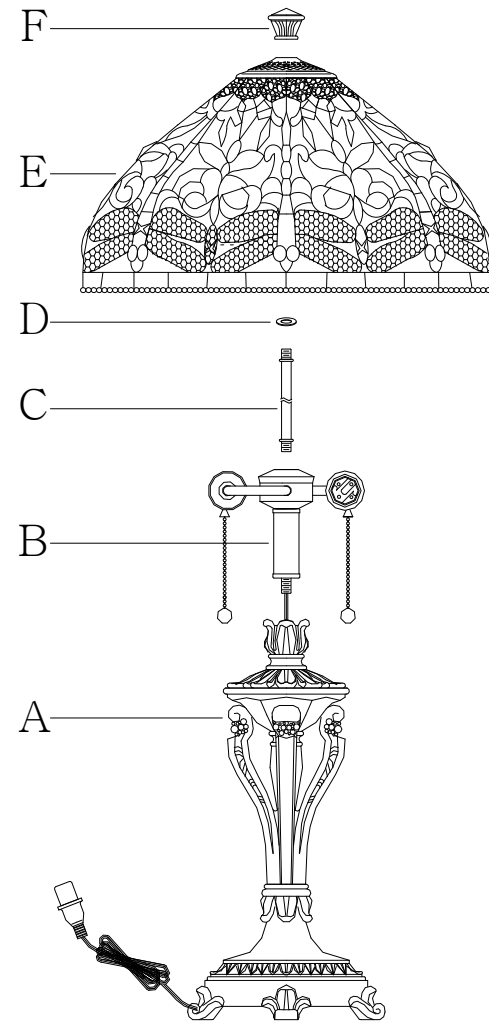

Your lamp now is ready to enjoy

**Use 2*60 Wattage (Maximum)
Type A bulb (Bulb not included)
Pull-chain socket switch**

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.