# ASSEMBLY INSTRUCTIONS FOR MAULARC LAMP ITEM #4026-26


### PLEASE READ AND SAVE THESE INSTRUCTIONS:

Be careful when unpacking the lamp since the wires are connected. If the wires are pulled out of their connectors, the lamp will not turn on.

#### Step (1)

Take the lamp base out from the inner box.

Use the wrench (H) to remove the screw (C) from threaded rod (B) and throw away.

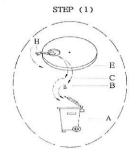


#### Step (2) - Assembly the product

- Insert pole (D) into lamp base (E), place and screw metal washer (F), nut (G) onto the pole (D) by spanner (H) in a clockwise direction and untill tight.
- 2. Hold top part (I) and tuck extra cord into pole (D).
- 3. Insert screw (J) into screw eye of pole (D) and turn to tighten.

Please ensure the socket (K) head face the other side of base hole (E).

- 4. Unscrew socket ring (M) and then place shade (L) onto socket (K).
- 5. Turn socket ring (M) clockwise to tighten onto socket (K).
- 6. Use only with three type A 60W incandescent or 13 W CFL bulbs (not included).

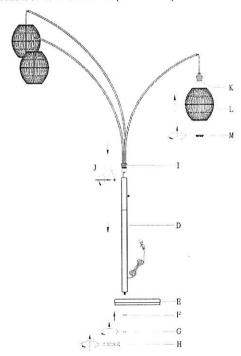

## **IMPORTANT SAFETY INSTRUCTIONS**

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not alter the plug in any way.



21 Penn Plaza Suite 909, New York, New York 10001

Tel: (212) 736-4440 Fax: (212) 736-4806

www.adessohome.com