


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-961TB

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. SCREW THE LAMP BODY (B) INTO THE BASE(A).
3. SCREW THE SOCKET GROUP(C) INTO THE BODY (B)
4. STICK THE PAD (F) INTO THE BOTTOM OF THE BASE (A).
5. INSERT THE HARP(D) INTO THE SADDLE OF THE SOCKET GROUP (C).
6. PUT THE SHADE (NOT INCLUDED) ONTO THE HARP(D), THEN SCREW FINIAL(E) TO TIGHTEN THE SHADE.
7. UNLOOSEN THE STRIP OF CONIFER LEAF OF THE BODY (B) AND THEN ADJUST THE CONIFER LEAF INTO PLEASANT PLACE.
8. INSERT THE POLARIZED PLUG INTO OUTLET, TURN ON THE SWITCH AND ENJOY YOUR LAMP.

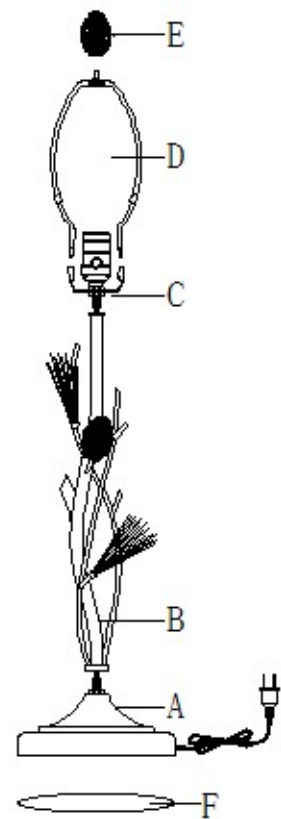

WATTAGE: 3-WAY 150W TYPE A (EX BULB)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.