


# ASSEMBLY INSTRUCTIONS

## ITEM NO: LA-2004W2L-1

THE LAMP HAVE TWO OF MEANS TO ASSEMBLE: THIS IS FIXTURE.

1. Carefully unpack and place all parts on a smooth surface and lay them up as per the sketch.

2. Cut off the plug from where (V) the wire is 6 inch to 8 inch. Peel off the 14mm plastic cover at the end of wire. Pull wire back to body, it is then here wire (K). use tube stopper (W) to replace wire clamp at point (U).

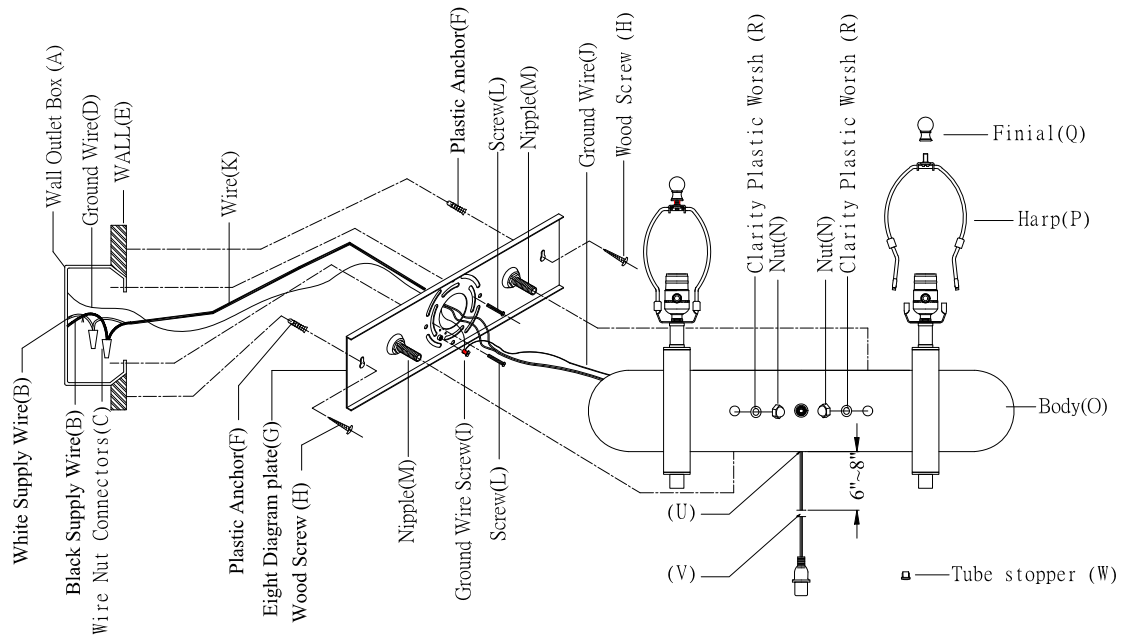

3. Drill two level holes on the wall refer to holes on the eight diagram plate (G), punch plastic anchor (F) into the holes on the wall, tighten eight diagram plate (G) to wall by wood screw (H) and screw (L).
4. Connect supply wire (B) and wire (K) with wire nut connectors (C), positive to positive, negative to negative, then wrap it by insulating tape.
5. Screw ground wire (D) and ground wire (J) with ground wire screw (I).
6. Attach body (O) to eight diagram plate (G) through nipple (M), then add clarity plastic wash (R), tighten it by nut (N).
7. Insert harp (P) to saddle of body (O).
8. put shade on harp (P), tighten it by finial (Q).

**WATTAGE:** 2x60W TYPE A (EX BULB)

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

# ASSEMBLY INSTRUCTIONS

ITEM NO: LA-2004W2L-1

THE LAMP HAS TWO MEANS TO ASSEMBLE: THIS IS PORTABLE.

1. Carefully unpack and place all parts on a smooth surface, and lay them up as per the sketch.

2. Drill four level holes on the wall, punch plastic anchor (A) into the holes. Screw the eight diagram plate (C) to wall with wood screw (B)

3. Attach body (G) to eight diagram plate (C) through nipple (D), tighten it by clarity plastic wash (E) and nut (F).

4. Insert harp (H) into saddle of body (G).

5. Put shade on harp (H), tighten it by finial (I)

6. Make sure body (G) is installed to the wall tightly, take out wire covering parts (2pcs wire cover, wood screw, plastic anchor (J) 4pcs)

7. Put wire cover (L) right under the hole


that the wire comes out of. drill holes on the wall according to the holes on the wire cover (L).

8. Punch plastic anchor (J) to the holes. tighten wire cover (L) to wall by wood screw (K).

9. Have wire (O) go through wire cover (L).

10. Put wire cover (M) to wire cover (L), make sure wire cover (L) is fully covered.

11. Insert the polarized plug into wall outlet, turn on the switch and enjoy your new lamp.

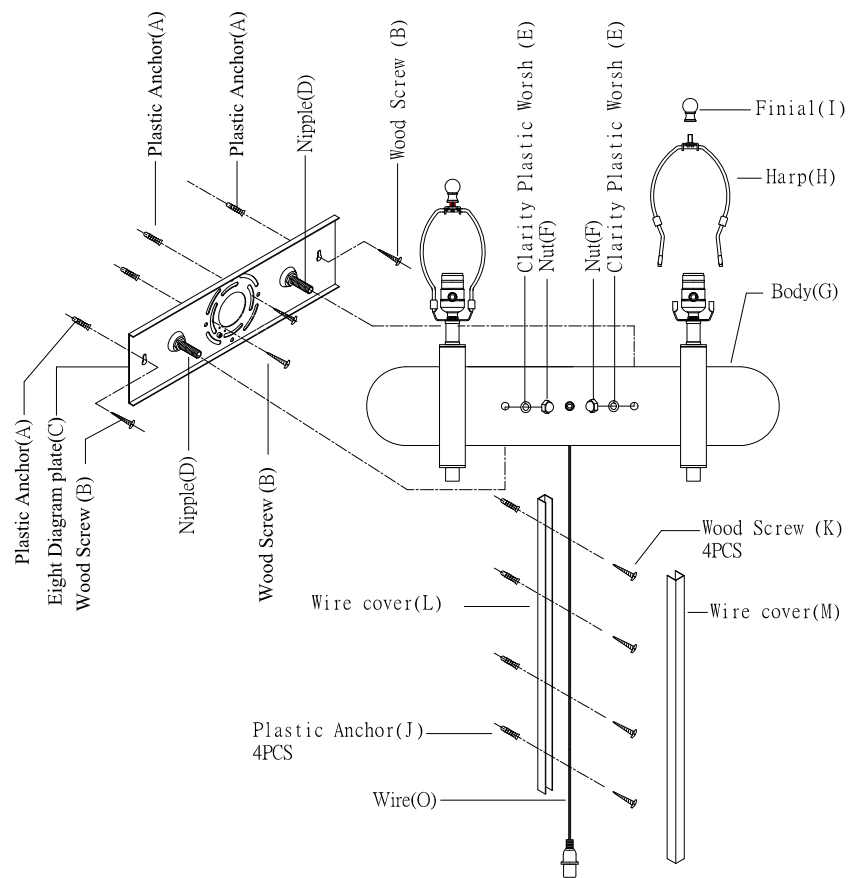

**WATTAGE:** 2x60W TYPE A (EX BULB)

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

**326403B**