
ASSEMBLY INSTRUCTIONS ITEM NO: BO-462

- 1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
- 2. CONNECT THE SOCKET GROUP (C),IRON TUBE (B), BASE GROUP (A) AS THE SKETCH.
- 3. STICK THE PAD (G) INTO THE BOTTOM OF THE BASE (A).
- 4. INSERT HARP (D) INTO THE LAMPHOLDER CAP OF THE SOCKET GROUP (C) .
- 5. PUT SHADE (E) ONTO THE HARP (D), SCREW FINIAL(F) TO TIGHTEN THE SAHDE .YOUR NEW LAMP IS NOW READY TO ENJOY.

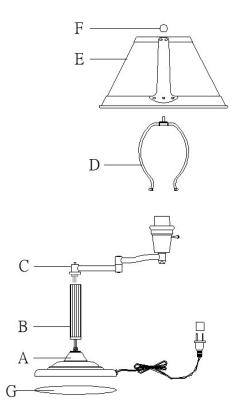

Use 60 Wattage (Maximum) type A bulb (Bulb not included)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.