


Assembly Instructions for 1211

We recommend installation of this fixture be done by a licensed electrician. Turn off power at the main fuse or circuit breaker box. DO NOT EXCEED RECOMMENDED WATTAGE!

** Actual parts may vary slightly depending upon them model

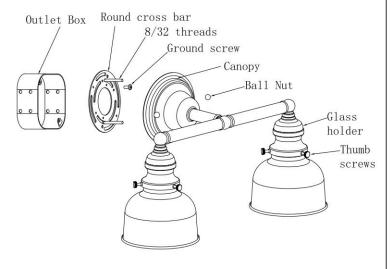

- 1. Remove the parts carefully from the box before discarding the carton
- 2. Attach the cross bar to the outlet box with ground screw facing out.
- 3. Thread the 8/32 threads into the cross bar; about 1/4" should extended beyond the back plate.
- 4. Fasten ground wire to green screw, Fasten lead wire (or white wire) with ridges to the white wire. Use wire nut to fasten it.
- 5. Fasten smooth (or black wire) lead wire to the black wire in the box & use nut to fasten it.
- 6. Place fixture over the wall the outlet box going through 8/32 threads.
- 7. Secure the fixture with ball nut.
- 8. Using 3 thumb screws, fasten the shade on the glass holder (shade optional).
- 9. Install bulbs (not included).
- 10. Restore circuit breaker.

^{*}Never touch the sconce/shade while power is on. To change bulb, allow 15 minutes for fixture to cool down.