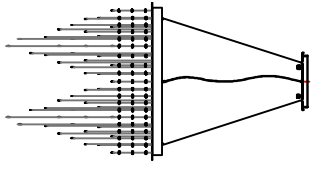



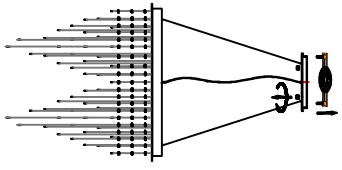
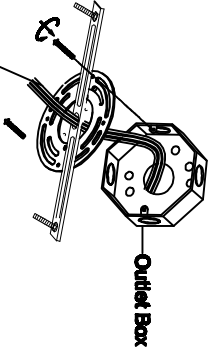


Assembly Instruction Sheet #IS 6640P32 For Style 6640P32

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (8) GU10 35W Aluminum (Not Included).
Estimated Assembly Time: 10-20 minutes.
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

<p>Package Contents</p>  <p>1 Fixture Body x1</p>  <p>1 Crystal x87</p> <p>40mmX1PCS</p> <p>Hardware Contents</p> <table border="1"> <thead> <tr> <th>PART</th> <th>DESCRIPTION</th> <th>QUANTITY</th> </tr> </thead> <tbody> <tr> <td>BB</td> <td>Wire nut</td> <td>2pos</td> </tr> <tr> <td>CC</td> <td>Screw</td> <td>2pos</td> </tr> </tbody> </table>  	PART	DESCRIPTION	QUANTITY	BB	Wire nut	2pos	CC	Screw	2pos	<p>STEP 1 - Release Crossbar from Ceiling Canopy.</p>  <p>Figure 1</p> <p>STEP 2 - Attach Crossbar to Outlet Box.</p>  <p>Supply Wires with Outlet Box Screws Ground Wire</p> <p>Figure 2</p>
PART	DESCRIPTION	QUANTITY								
BB	Wire nut	2pos								
CC	Screw	2pos								

STEP 3 - Wire Connections
 A. Use standard wire connectors (not included) to make all wire connections. Twist connectors and wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

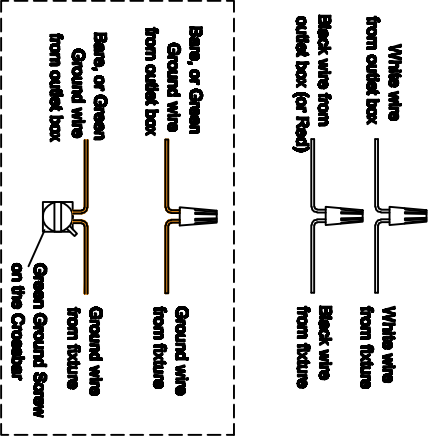
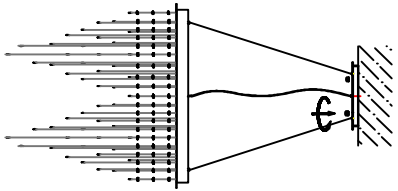


Figure 3

<p>STEP 4 - Install Ceiling Canopy to Ceiling</p>  <p>Figure 4</p>

STEP 5 - Install bulbs and Crystal.

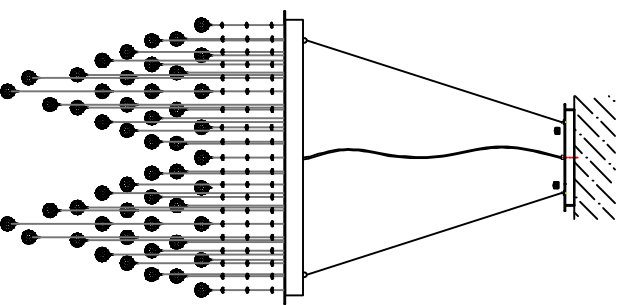


Figure 5

40mmX1PCS



1 Crystal x87