


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2889FL

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

- 1.SCREW POLE (D) CLOCKWISE INTO POLE (E) TO TIGHTEN.
- 2.SCREW POLE (E) CLOCKWISE INTO POLE (F) TO TIGHTEN.
- 3.UNSCREW THE WASHER (H) AND NET (I) FROM THE POLE (F)
4. INSERT POLE (F) INTO THE BASE (G) ,AND TIGHTEN BY SCREW WASHER (H) & NUT (I). MAKE SURE THE BASE (G) AND THE SOCKET ARE AT THE SAME DIRECTION, THEN TIGHTEN WITH WASHER (H) & NUT (I) .
- 5.PLACE SHADE (B) ONTO THE SOCKET (A),THEN SCREW IT BY SOCKET RING (C) CLOCKWISE TO TIGHTEN.
- 6.SCREW FINIAL (J) INTO THE SOCKET TOP .
- 7.INSTALL BULB (NOT INCLUDED) INTO THE SOCKET.
- 8.INSERT THE POWER PLUG INTO AN OUTLET AND ENJOY !!

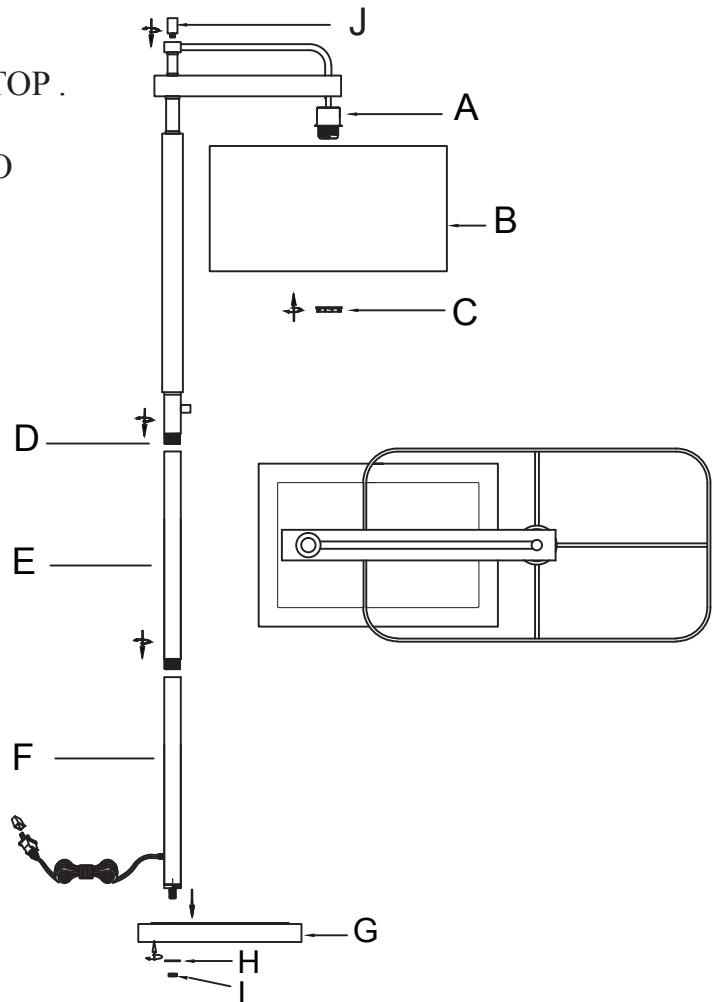

Use MAX 100 Wattage type A bulb (Bulb included)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.