
ITEM NO:M100109MBK M100109NB

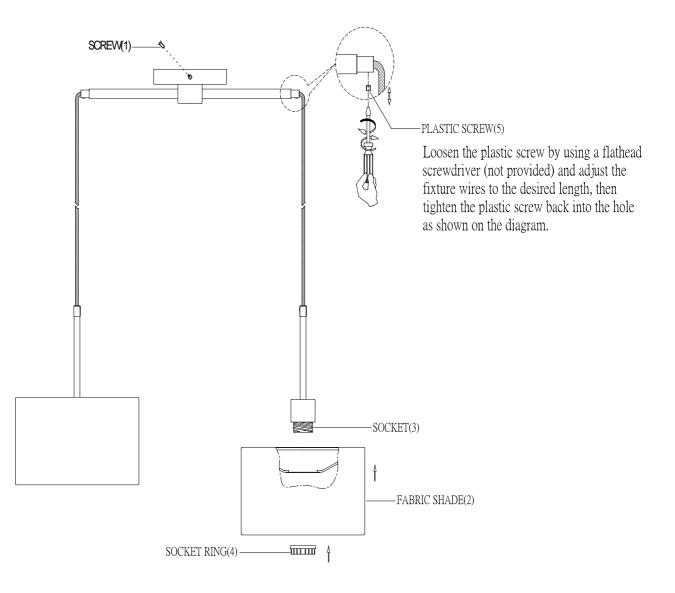

INSTALLATION INSTRUCTIONS

1.Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;

3. Install the fabric shade (2) into the scket (3), then secure them with the socket ring (4).

4. Fixture is ready for lamping and installation.