
## ITEM NO:M100108MBK M100108NB

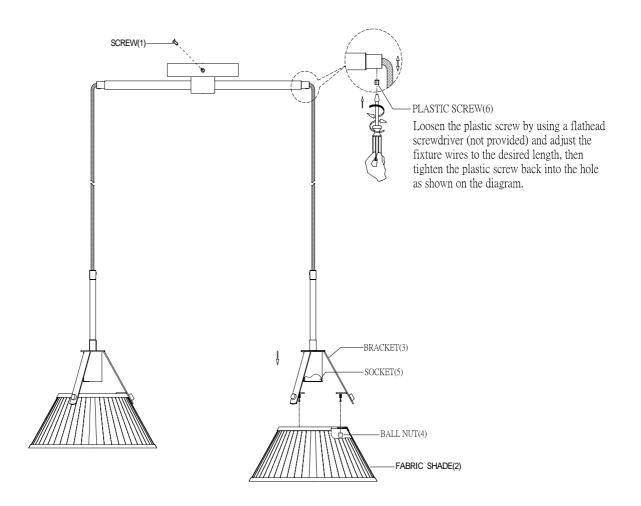

## INSTALLATION INSTRUCTIONS

- 1.Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;
- 3. Install the fabric shade (2) into the bracket (3), then secure them with the ball nut (4).
- 4. Install the bulb (NOT PROVIDED) into socket (5).
- 5. Fixture is ready for lamping and installation.