





## **ASSEMBLY INSTRUCTION MODEL #505-MT**

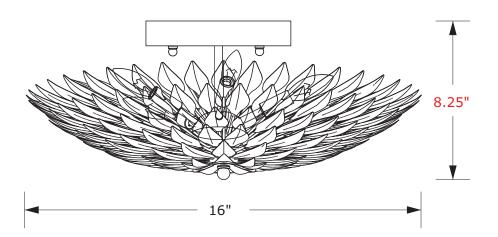



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate

local electrical codes.





You will need 4 -Candelabra Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE THIS FIXTURE IS DAMP RATED


## How to install

- 1.Insert recommended bulb (not included).
- 2.Raise the canopy onto the outlet box, and secure it with the ball nuts.





## PART NUMBER MODEL #505-MT

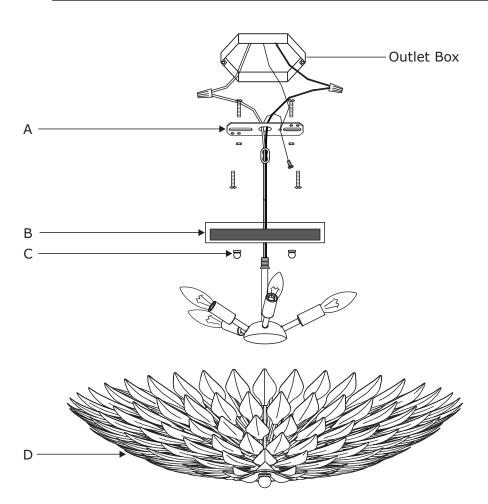

## Part Number

- A. (1) Mounting Hardware
  B. (1) Canopy(W4.25",H0.75") #XRE505MTCAN4.25IN
  C. (2) Ball Nut #XRE505MTBANUT
  D. (1) Leaf Assembly